




SEALED PELLET STOVE

# **RAAM COMFORT AIR 8 S1 RAAM COMFORT AIR 8 UP! S1**

## **PART 1 - REGULATIONS AND ASSEMBLY**

Instructions in English

# **MCZ**

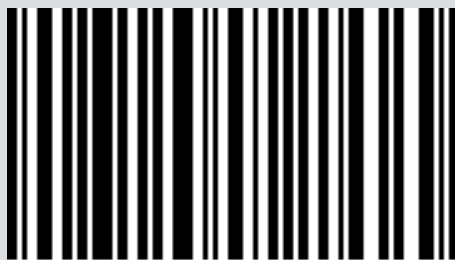

8901872600

TABLE OF CONTENTS

TABLE OF CONTENTS ..... II

INTRODUCTION .....1

1-WARNINGS AND WARRANTY CONDITIONS .....2

2-INSTALLATION .....8

3-DRAWINGS AND TECHNICAL FEATURES.....17

4-UNPACKING.....20

5-CONNECTION OF THE TOP SMOKE OUTLET PIPE .....23

6-CONNECTION OF THE REAR SMOKE OUTLET PIPE .....25

7-COMFORT AIR .....26

8-CLADDING INSTALLATION/REMOVAL .....30

9-OPENING THE DOORS .....50

10-CONNECTIONS TO ADDITIONAL DEVICES .....51

11-LOADING THE PELLETS .....53

## INTRODUCTION

Dear Customer,

our products are designed and manufactured in compliance with European reference standards for construction products (EN13240 for wood-burning stoves, EN14785 for pellet-burning appliances, EN13229 for fireplaces/wood-burning inserts and EN 12815 for wood-burning range cookers), with high quality materials and extensive experience in transformation processes. The products also meet the essential requirements of Directive 2006/95/EC (Low Voltage) and Directive 2004/108/EC (Electromagnetic Compatibility). To get the best performance, we suggest you read the instructions in this manual carefully.

This installation guide is an integral part of the product: ensure that the manual is always supplied with the appliance, even if it changes owner. If the manual is lost, you can request another copy from the local Technical Dept. or download it directly from the company's website.

All local regulations, including those referring to national and European standards, must be observed when installing the appliance.

In Italy, for the installation of systems with a biomass below 35KW, refer to the Ministerial Decree 37/08 and the qualified installation technician with the suitable requirements must issue a certificate of compliance for the system installed. (By system we intend Stove+Flue+Air vent).

## REVISIONS TO THE PUBLICATION

The content of this manual is strictly technical and the property of MCZ Group Spa.





No part of this manual may be translated into other languages, adapted and/or reproduced, even in part in other mechanical and/or electronic form or media, for photocopies, recordings or other, without the prior written authorisation from MCZ Group Spa.

The company reserves the right to make changes to the product at any time without prior notice. The proprietary company reserves its rights according to law.

## CARE OF THE MANUAL AND HOW TO CONSULT IT

- Take care of this manual and store it in an easily and quickly accessible place.
- Should this manual be lost or destroyed, request a copy from your retailer or directly from the authorised Technical assistance department. It can also be downloaded from the company's website.
- "**Bold text**" requires special attention.
- "*Text in italics*" is used to draw attention to other paragraphs in the manual or for any additional clarifications.
- "Note" provides the reader with additional information.

## SYMBOLS USED IN THE MANUAL

	<b>ATTENTION:</b> carefully read the corresponding message as <b>failure to comply with the information provided may result in serious damage to the product and danger to the persons who use it.</b>
	<b>INFORMATION:</b> failure to comply with these provisions will compromise use of the product.
	<b>OPERATING SEQUENCES:</b> sequence of buttons to be pressed to access the menus or perform adjustments.
	<b>MANUAL</b> carefully read this manual or the relative instructions.



### SAFETY PRECAUTIONS

- **Installation, electrical connection, operating check and maintenance must only be carried out by authorised and qualified personnel.**
- **Install the product in accordance with all local and national legislation and regulations in force in the region or state.**
- Only use the fuel recommended by the manufacturer. The product must not be used as an incinerator.
- It is strictly forbidden to use alcohol, petrol, liquid fuel for lanterns, diesel, bio-ethanol, fluids for lighting charcoal or similar liquids to light/rekindle the flame in these devices. Keep these flammable liquids well away from the appliance when in use.
- Do not put any fuel other than wood pellets in the hopper.
- The instructions provided in this manual must always be complied with to ensure the product and any electronic appliances connected to it are used correctly and accidents are prevented.
- **This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge provided they are supervised or have been given instructions regarding use of the appliance in a safe way and understand the hazards involved. Children must not play with the appliance. Cleaning and maintenance to be performed by the user must not be carried out by children without supervision.**
- The user, or whoever is operating the product, must read and fully understand the contents of this installation guide before performing any operation. Errors or incorrect settings may cause hazardous conditions and/or incorrect operation.
- Do not climb on or lean on the product.
- Do not dry linen on the product. Any drying racks or the like must be kept at a safe distance from the product. **Fire hazard.**
- *All liability for improper use of the product is entirely borne by the user and relieves the manufacturer of any civil and criminal liability.*

## 1-WARNINGS AND WARRANTY CONDITIONS

- Any type of tampering or unauthorised replacement with non-original spare parts may be hazardous for the operator's safety and relieves the company of any civil and criminal liability.
- Many surfaces of the product get very hot (door, handle, glass, smoke outlet pipes, etc.). **Avoid coming into contact with these parts without adequate protective clothing or suitable equipment, such as gloves with thermal protection** or "cold handle" operating systems.
- **It is forbidden to operate the product with the door open or the glass broken.**
- **The doors/covers on the appliance must remain closed when it is not being used.**
- The product must be powered by an electrical system that is equipped with an effective earthing device.
- Switch the product off in the event of a fault or malfunction.
- Accumulated unburnt pellets in the burner after each "failed ignition" must be removed before lighting again. Check that the burner is clean and positioned properly before lighting again.
- Do not wash the product with water. Water may penetrate inside the unit and damage the electrical insulation and cause electric shocks.
- Do not stand for a long time in front of the product in operation. Do not overheat the room you are in and where the product is installed. This may cause injuries and health problems.
- Install the product in a location that does not present a fire hazard and is equipped with power and air supplies and smoke outlets.
- In the event of fire in the chimney, turn off the device, disconnect it from the mains and do not open the hatch. Then contact the competent authorities.
- The product and the cladding must be stored in a dry place and must not be exposed to weathering.
- It is recommended not to remove the feet that support the product in order to ensure adequate insulation, especially if the flooring is made of flammable materials.

## 1-WARNINGS AND WARRANTY CONDITIONS

- In the event of a malfunction of the ignition system, do not force it on by using flammable materials.
- Special maintenance must only be performed by authorised and qualified personnel.
- Assess the static conditions of the surface on which the weight of the product will rest and provide suitable insulation if it is made of flammable material (e.g. wood, fitted carpet or plastic).
- Live electrical parts: only power the product once it has been fully assembled.
- Disconnect the product from the 230V power supply before performing any maintenance operations.
- Improper use or poor maintenance of the product can cause hazardous situations to arise.
- **It is forbidden to manually load the fuel into the brazier. Failure to follow this warning can lead to hazardous situations.**
- **Before the product is restarted, always remove any unburned pellets building up in the brazier due to failed ignition, the emptying of the hopper or any situation that may cause this condition.**

# 1-WARNINGS AND WARRANTY CONDITIONS

## INFORMATION:

Please contact the retailer or qualified personnel authorised by the company to resolve a problem.

- Only use the fuel specified by the manufacturer.
- When the product is switched on for the first time, it is normal for it to emit smoke due to the paint heating for the first time. Therefore make sure the room in which it is installed is well ventilated.
- Check and clean the smoke outlet pipes regularly (chimney fitting).
- The product is not a cooking appliance.
- Always keep the cover of the fuel tank closed.
- Store this installation and user manual with care as it must accompany the product for the duration of its useful life. If the product is sold or transferred to another user, always ensure the manual is also handed over.

## INTENDED USE

The product only works with wood pellets and must be installed indoors.

## PRODUCT PERFORMANCE CHECKS.

All our products undergo ITT TESTS carried out by a notified laboratory (system 3) and in accordance with (EU) Regulation number 305/2011 "Construction products", according to standard EN 14785:2006 (pellets) and "Machinery Directive" EN 303-5 (boilers).

In the case of tests for any market surveillance or inspections by third parties, please take the following warnings into account:

- to reach the declared performance levels, the product must perform an operating cycle of at least 15/20 hours beforehand
- use the average draught of the combustion smoke specified in the "product technical specifications" table
- the type of pellets used must comply with current EN ISO 17225-2 regulations
- the amount of fuel may vary according to the length and calorific value of the fuel. This may require some adjustments to stay in line with the hourly consumption specified in the "product technical specifications" table. A1 pellets ensure an overall calorific value within tight margins compared to the test pellets used. However, size considerably affects performance, therefore on average it must not be less than 24 mm long and with a 6mm diameter
- in the case of a wood-burning product, check the correct residual moisture content of the fuel, which must not be less than 12% or more than 20%. As the moisture increases, different combustion air settings are required. The settings are to be carried out via the combustion air register, thereby modifying the mixture between primary and secondary air.
- it is required to check the operation of devices that can affect performance (for example air fans or electrical safety devices) in case of damage due to handling.
- maximum performance can be achieved at the maximum flame and ventilation power.
- strictly comply with the withdrawal points required by regulations both in terms of emissions and temperature.

## WARRANTY CONDITIONS

The company guarantees the product, **with the exception of parts subject to normal wear** (listed on the following page), for a period of **2 (two) years** from the date of purchase attested by:

- a document to serve as proof of purchase (invoice and/or receipt) that shows the name of the vendor and the date on which the purchase was made;
- forwarding of the completed warranty certificate within 8 days of purchase.

Furthermore, in order for the guarantee to be valid, the device must be installed and calibrated by qualified personnel, and where necessary, the user must be issued with a declaration of conformity and correct functioning of the product.

We recommend testing the product before completion with the relative finishes (cladding, painting of walls, etc.).

Installations that do not meet the current standards, improper use and lack of maintenance as expected by the manufacturer, void the product warranty.

## 1-WARNINGS AND WARRANTY CONDITIONS

The warranty is valid on the condition that the instructions and warnings contained in the user and maintenance manual are observed, and therefore the product is used correctly.

Replacement of the entire system or repair of one of its components does not extend the warranty period, and the original expiry date remains unchanged.

The warranty covers the replacement or free repair **of parts recognised as being faulty at source due to manufacturing defects.**

In the event of a fault, to benefit from the warranty, the customer must keep the warranty certificate and provide it along with the document given at the time of purchase to the Technical Service Centre.

### EXCLUSIONS

The warranty does not cover malfunctions and/or damage to the appliance that arise due to the following causes:

- Damage caused during transport and/or handling
- all parts that develop faults due to negligence or improper use, incorrect maintenance, installation that does not comply with the manufacturer's instructions (always refer to the installation guide provided with the appliance)
- incorrect sizing with regard to the use or faults in the installation or failure to implement the necessary measures to ensure proper execution
- improper overheating of the equipment, i.e. the use of fuels not conforming to the types and quantities indicated in the instructions provided
- further damage caused by incorrect user operations in an attempt to fix the initial fault
- worsening of the damage caused by the user continuing to operate the appliance even after the fault has been detected
- in the presence of a boiler, any corrosion, deposits or breakage caused by water flow, condensation, hardness or acidity of the water, improperly performed descaling treatments, lack of water, mud or limescale deposits
- inefficiency of chimneys, flues or parts of the system affecting the appliance
- damage caused by tampering with the appliance, atmospheric agents, natural disasters, vandalism, electrical discharges, fires, faults in the electric and/or hydraulic system.
- Failure to have yearly stove maintenance performed by an authorised technician or qualified personnel shall render the warranty void.

The following are also excluded from this warranty:

- parts subject to normal wear such as gaskets, glass, cladding and cast iron grilles, painted, chrome-plated or gilded parts, handles and electric cables, bulbs, indicator lights, knobs, all parts which can be removed from the firebox.
- Variations in colour of the painted or ceramic/serpentine parts and crazed ceramics as they are natural characteristics of the material and product use.
- masonry work
- system parts (if present) not supplied by the manufacturer

Any technical operations on the product to remove the aforementioned defects and consequent damage must be agreed upon with the Technical Service Centre, who reserves the right to accept the relative appointment or not. However, said operations shall not be carried out under warranty but as technical support to be granted as part of any potentially and specifically agreed conditions and in accordance with the fees in force for the work to be carried out.

The user will also be charged for any costs incurred to remedy the incorrect technical operations, tampering or damage to the appliance, not attributable to original faults.

Without prejudice to the legal or regulatory limits, the warranty does not cover the containment of atmospheric and acoustic pollution.

***The company declines all liability for any damage which may be caused, directly or indirectly, to persons, animals or objects as a consequence of non compliance with any provision specified in the manual, especially warnings regarding installation, use and maintenance of the appliance.***



## 1-WARNINGS AND WARRANTY CONDITIONS

### SPARE PARTS

In the event of a malfunction, consult the retailer who shall forward the call to the Technical Assistance Department.

Only use original spare parts. The retailer or service centre can provide all necessary information regarding spare parts.

We do not recommend waiting for the parts to get worn out before having them replaced. It is crucial to perform regular maintenance checks.



***The company declines all liability if the product and any other accessory is used improperly or modified without authorisation.***

***All parts must be replaced with original spare parts.***

### Information for management of electric and electronic appliance waste containing batteries or accumulators



This symbol, which is used on the product, batteries, accumulators or on the packaging or documents, means that at the end of its useful life, this product, the batteries and the accumulators included must not be collected, recycled or disposed of together with domestic waste.

Improper management of electric or electronic waste or batteries or accumulators can lead to the leakage of hazardous substances contained in the product. For the purpose of preventing damage to health or the environment, users are kindly asked to separate this equipment and/or batteries or accumulators included from other types of waste and to arrange for disposal by the municipal waste service. It is possible to ask your local dealer to collect the waste electric or electronic appliance under the conditions and following the methods provided by national laws transposing the Directive 2012/19/EU.

Separate waste collection and recycling of unused electric and electronic equipment, batteries and accumulators helps to save natural resources and to guarantee that this waste is processed in a manner that is safe for health and the environment.

For more information about how to collect electric and electronic equipment and appliances, batteries and accumulators, please contact your local Council or Public Authority competent to issue the relevant permits.

### WHY SEALED

Products constructed with a perfectly sealed structure do not consume the room's oxygen but draw all the air from the outer environment (if suitably ducted) and may therefore be installed in all houses that require a high degree of insulation such as "passive" or "high energy efficiency" houses. Thanks to this technology there is no risk of smoke emissions in the room, hence no air inlets and relevant ventilation grilles are required in the installation premises.

Consequently, there will be no more draughts of cold air in the room, which make it less comfortable and reduce the overall efficiency of the system. The sealed stove may even be installed in the presence of forced ventilation or in premises that might have negative pressure with respect to the outside.

## 2-INSTALLATION



**The instructions in this chapter refer explicitly to the Italian installation regulation UNI 10683. In any case, always observe the regulations in force in the country of installation.**

### PELLETS

Wood pellets are manufactured by extruding sawdust which is produced during the processing of natural dried wood (without paint). The compactness of the material is guaranteed by the lignin contained in the wood itself and allows the pellets to be produced without glue or binders.

The market offers different types of pellets with characteristics that vary according to the wood mixtures used. The most common diameter on the market is 6 mm (although 8 mm diameter is also available) with a length, on average, between 3 and 40 mm. A good quality pellet has a density of between 600 and 750 or more kg/cubic metres and a moisture content that accounts for 5 to 8% of its weight.

Pellets have technical advantages besides being an ecological fuel, as the wood residue is used completely, thereby achieving cleaner combustion than that of fossil fuels.

While good-quality wood has a calorific value of 4.4 kW/kg (15% moisture, after about 18 months of seasoning), that of pellets is around 4.9 kW/kg. To ensure good combustion, the pellets must be stored in a dry place and protected from dirt. Pellets are usually supplied in 15 kg bags, therefore, storing them is very convenient



15 Kg BAG OF PELLETS

Good quality pellets guarantee good combustion, thereby decreasing harmful emissions into the atmosphere.



***The poorer the quality of the fuel, the more often the internal parts of the brazier and combustion chamber must be cleaned.***

The main quality certifications for pellets currently available on the European market guarantee that the fuel complies with class A1/A2 according to ISO 17225-2 (ex EN 14961). These certifications include, for example, **ENplus**, **DINplus**, **Ö-Norm M7135**, and specifically assure that the following characteristics are complied with:

- calorific value:  $4.6 \div 5.3$  kWh/kg.
- Water content:  $\leq 10\%$  of the weight.
- Percentage of ash: max 1.2% of the weight (A1 less than 0.7%).
- Diameter:  $6 \pm 1/8 \pm 1$  mm.
- Length:  $3 \div 40$  mm.
- Content: 100% untreated wood without the addition of binding agents (max 5% bark).
- Packaging: in sacks made from ecologically compatible or biologically decomposing material.



***The company strongly recommends using certified fuel for its products (ENplus, DINplus, Ö-Norm M7135). Poor quality pellets or others that do not comply with the characteristics specified previously may compromise the operation of your product and can therefore make the warranty and product liability invalid***

## 2-INSTALLATION

### FOREWORD

The installation position must be chosen according to the room, smoke extraction system and flue. Check with local authorities whether there are any restrictive regulations in force regarding the combustion air inlet, the smoke outlet system, the flue or the chimneypot. The manufacturer declines all responsibility in the event of installations that do not comply with the laws in force, incorrect room air exchange, electrical connection non-compliant with the standards and inappropriate use of the appliance. The installation must be carried out by a qualified technician, who must issue a declaration of conformity of the system to the purchaser and shall assume full responsibility for final installation and consequent good operation of the product.

In particular one must ensure that:

- there is a suitable combustion air inlet and smoke outlet in compliance with the type of product installed
- other stoves or devices installed do not cause negative pressure in the room where the product is installed (for sealed appliances only, a maximum of 15 Pa of negative pressure in the room is allowed)
- when the product is switched on there is no reflux of smoke in the room
- smoke extraction takes place in full safety (sizing, smoke seal, distances from flammable materials...).

**We especially recommend checking the data plates of the flue for the safety distances that must be observed in the presence of combustible materials and the type of insulating material to be used. These indications must be followed strictly to prevent serious harm to people and to the integrity of the home.** Installation of the appliance must ensure easy access to clean the appliance itself, the smoke outlet pipes and the flue. **It is forbidden to install the stove in rooms with a fire hazard. Installation in studio flats, bedrooms and bathrooms is only permitted with sealed or closed appliances equipped with suitable combustion air ducting directly outside. Always maintain adequate distance and protection in order to prevent the product from coming into contact with water.**

In the event there are several appliances installed, the external air inlet must be sized accordingly.

### MINIMUM DISTANCES


It is recommended to install the stove detached from any walls and/or furniture, with a minimum clearance to allow effective aeration of the appliance and a good distribution of heat in the room. Comply with the distances from flammable or heat-sensitive objects (sofas, furniture, wood panelling, etc.) as specified below. The frontal distance from flammable materials must be at least as specified in the product's technical data table.

If particularly delicate objects are present, such as furniture, curtains or sofas, increase the stove distance accordingly.



***If the floor is made of wood, it is recommended to fit a floor protection sheet in compliance with the standards in force in the country of installation.***

	Non-flammable walls	Flammable walls
<b>RAAM COMFORT AIR 8 S1</b>	A = 2 cm B = 5 cm	A = 3 cm B = 10 cm
<b>RAAM COMFORT AIR 8 UP! S1</b>		

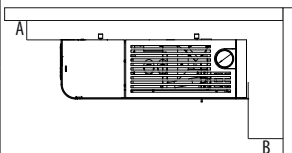

If the floor is made of combustible material, it is recommended to use a protection made of non-combustible material (steel, glass...) that also protects the front from any falling combusted material during cleaning operations.

The appliance must be installed on a floor with adequate load capacity.

If the existing construction does not meet this requirement, appropriate measures must be taken (for example a load distribution plate).

## 2-INSTALLATION

### FOREWORD

The Flue chapter has been drawn up with reference to the provisions of European Standards (EN13384 - EN1443 - EN1856 - EN1457). The chapter provides indications for installing an efficient and correct flue but is under no circumstances to substitute the regulations in force, which the qualified manufacturer must be in possession of. Check with local authorities whether there are any restrictive regulations in force regarding the combustion air intake, the smoke outlet system, the flue or the chimneypot. The Company declines all liability relating to the poor functioning of the stove if this is due to the use of an insufficiently sized flue in violation of the standards in force.

### FLUE

The flue or chimney is of great importance for proper operation of a solid fuel-burning heating appliance with forced draught, as modern heating appliances have high efficiency with cooler flue gases and consequently less draught, it is therefore crucial for the flue to be built up to standard and always kept in perfect working order. A flue for a pellet/wood fuelled appliance must be at least category T400 (or greater if the appliance requires so) and resistant to soot fires. Smoke must be extracted through a single flue made of insulated steel (A) or an existing flue that complies with the intended use (B).

A simple air shaft made of cement must be suitably piped. In both solutions there must be an inspection cap (AT) and/or inspection access panel (AP) - FIG.1.

It is prohibited to connect more than one wood/pellet (\*) or any other type of appliance (cowl vents ...) to the same flue.

(\*) unless there are national derogations (for instance in Germany), which under suitable conditions allow for the installation of several appliances in the same fireplace. In any case, strictly follow the product/installation requirements of the relative regulations/legislation in force in that country

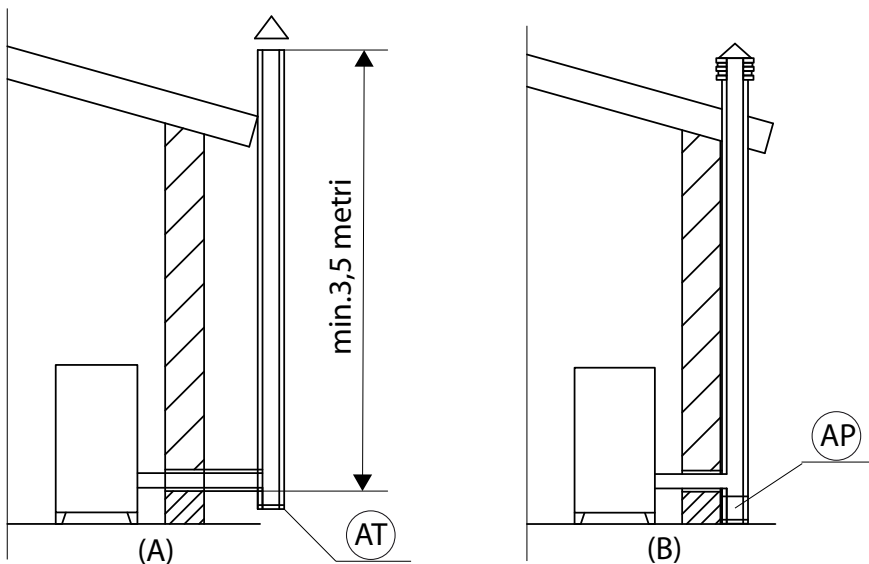


FIGURE 1 - FLUE

## 2-INSTALLATION

### TECHNICAL SPECIFICATIONS

Have the efficiency of the flue checked by an authorised technician.

The flue must be sealed against flue gases, in a vertical direction without narrowing, be made with materials impermeable to smoke, condensation, thermally insulated and suitable to resist normal mechanical stress over time (we recommend fireplaces made of A/316 or refractory material with insulated round section double chamber). It must be suitably insulated externally to avoid condensation and reduce smoke cooling. It must be separated from combustible or easily flammable materials via an air gap or insulating materials: check the distance specified by the chimney manufacturer according to EN1443. The chimney opening must be in the same room as the appliance, or at most in the adjoining room, and have a soot and condensation collection chamber beneath the opening, and be accessible via a sealed metal hatch.

#### FLAT ROOF

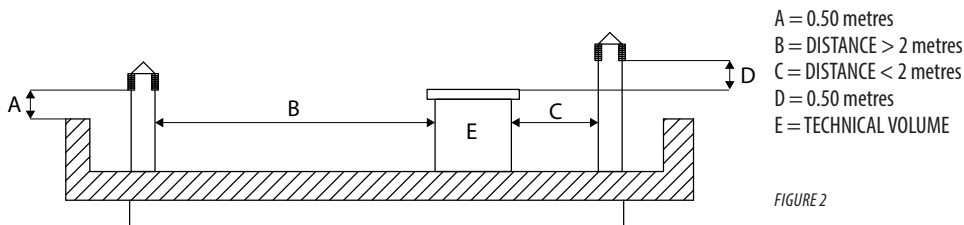


FIGURE 2

#### ROOF AT 15°

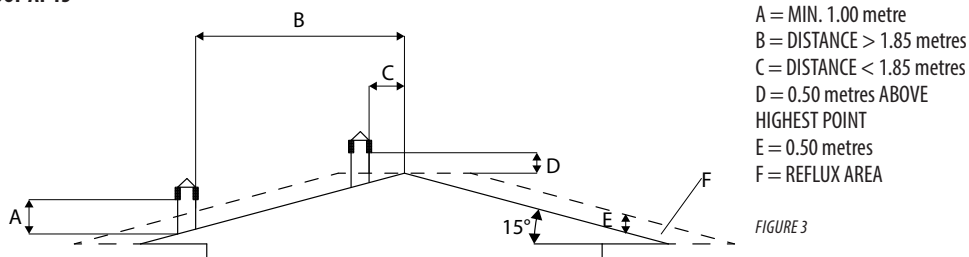


FIGURE 3

#### ROOF AT 30°

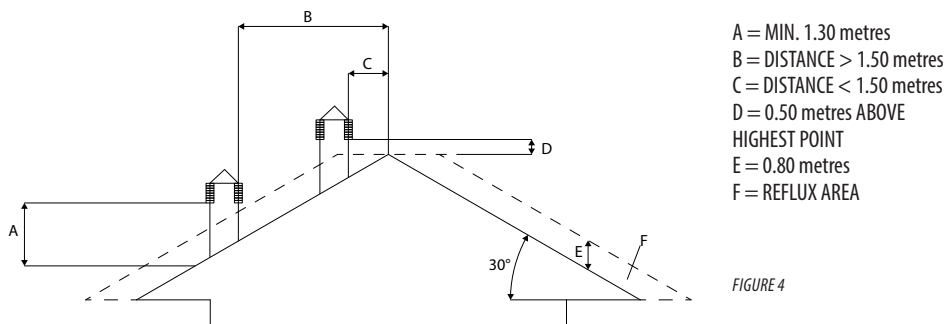


FIGURE 4

## 2-INSTALLATION

### ROOF AT 60°

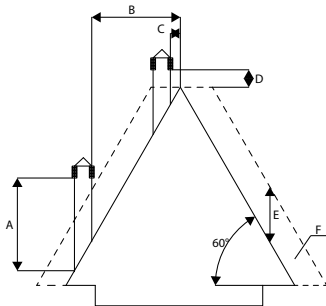


FIGURE 5

- A = MIN. 2.60 metres
- B = DISTANCE > 1.20 metres
- C = DISTANCE < 1.20 metres
- D = 0.50 metres ABOVE HIGHEST POINT
- E = 2.10 metres
- F = REFLUX AREA

### ROOF AT 45°

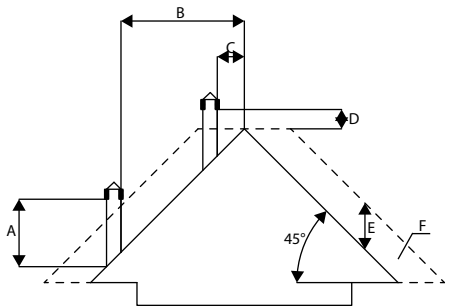


FIGURE 6

- A = MIN. 2.00 metres
- B = DISTANCE > 1.30 metres
- C = DISTANCE < 1.30 metres
- D = 0.50 metres ABOVE HIGHEST POINT
- E = 1.50 metres
- F = REFLUX AREA

### SIZING

The negative pressure (draught) of a flue also depends on its height. Check the negative pressure with the values indicated in the technical specifications. The minimum height of the chimney is 3.5 metres.

The interior cross-section of the flue can be round (best), square or rectangular (the ratio between the internal sides must be  $\leq 1.5$ ) with the sides joined with a minimum radius of 20 mm. The dimension of the cross-section must be **minimum Ø100mm**.

The cross-sections/lengths of the chimneys shown in the technical data tables are indications for correct installation. Any alternative configurations must be correctly sized in accordance with the general method of calculation of UNI EN13384-1 or other proven efficiency methods.

Some examples of flues available on the market are provided below:


AISI 316 steel chimney with double chamber insulated with ceramic fibre or equivalent resistant up to 400°C.

Refractory chimney with double insulated chamber and external lightweight concrete cladding with cellular material such as clay.


Traditional square-section clay chimney with insulating empty inserts.

Avoid products with an internal rectangular section where the larger side is 1.5 times the smaller side (e.g. 20x40 or 15x30).


### EXCELLENT

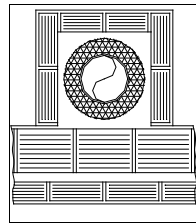


### GOOD

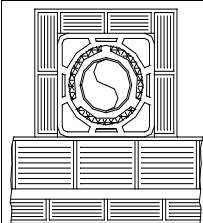

### POOR

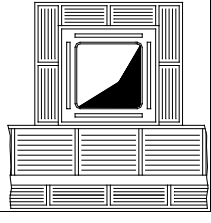

### VERY POOR

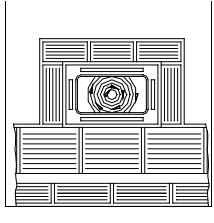

# 2-INSTALLATION

## MAINTENANCE

The flue must be kept clean, since the deposit of soot or unburnt oils reduces the cross-section, blocking the draught and thus compromising the efficient operation of the stove and, if large build-ups accumulate, can catch fire. The flue and chimneypot must be cleaned and checked by a qualified chimney sweep at least once a year. Once the inspection/maintenance has been performed, request a written report that the system is safe. Failure to perform cleaning jeopardises the system's safety.

## CHIMNEYPOT

The chimneypot is a crucial element for correct operation of the heating appliance: we recommend a windproof chimneypot (A), see Figure 7. The area of the opening for smoke extraction must be at least double the cross-section of the flue/piped system, and arranged so that smoke outlet is ensured even in the presence of strong wind. The chimneypot must prevent rain, snow or animals from entering the chimney. The height of outflow into the atmosphere must be beyond the reflux area caused by the shape of the roof or any nearby obstacles (see Figures 2-3-4-5-6).


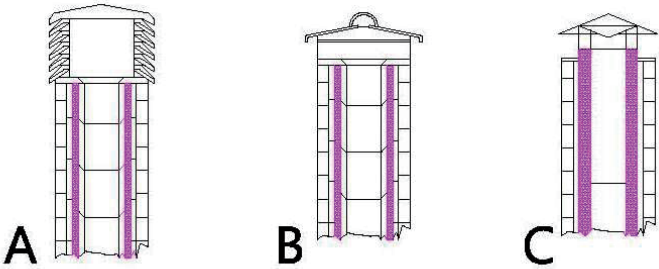


FIGURE 7

## CHIMNEY COMPONENTS

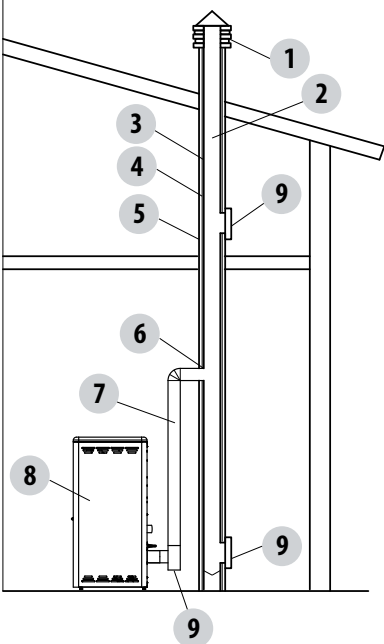

- KEY:
- (1) CHIMNEYPOT
  - (2) REFLUX CHANNEL
  - (3) SMOKE DUCT
  - (4) THERMAL INSULATION
  - (5) OUTSIDE WALL
  - (6) CHIMNEY FITTING
  - (7) SMOKE DUCT
  - (8) HEAT GENERATOR
  - (9) INSPECTION ACCESS PANEL

FIGURE 8

## 2-INSTALLATION

### EXTERNAL AIR INLET

It is mandatory to provide an adequate external air inlet that supplies the combustion air required for the product to work properly. The flow of air between the outside and the installation room may be direct, through an inlet in an external wall of the room (preferable solution see Figure 9 a), or indirect, via air intake from adjoining rooms and connecting permanently with the installation room (see Figure 9 b). Adjoining areas may not include sleeping areas, bathrooms, garages or general areas with a fire hazard. During installation it is required to check the minimum clearances required to draw air from outside. Take into account the presence of doors and windows that may interfere with the proper flow of air to the stove (see diagram below).

The air intake must have a minimum total net area of 80 cm<sup>2</sup>: the surface must be increased accordingly if other active generators (for example: electric fan for stale air extraction, kitchen hood, other stoves, etc.), which may cause negative pressure in the room, are present. Make sure that, with all appliances on, the pressure drop between the room and the outside does not exceed the value of 4 Pa (also for Oyster appliances if the combustion air has not been suitably ducted outside). If required, increase the intake section of the air inlet, which must be made at floor level and always protected with a bird-proof outer protection grid and in such a way that it cannot be obstructed by any object.


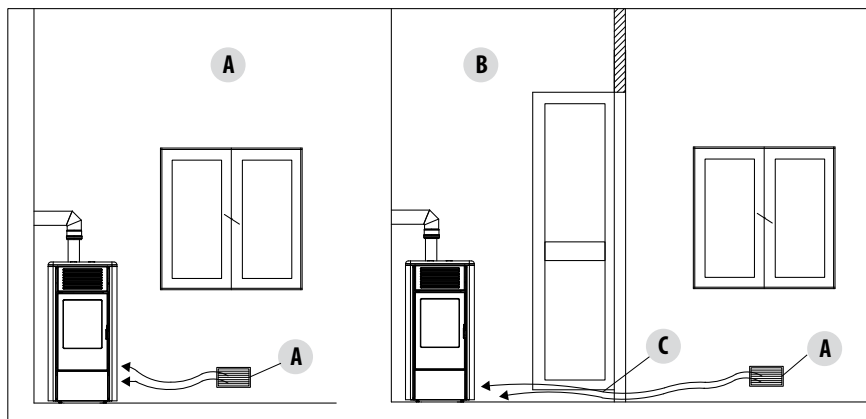


FIGURE 9 A - DIRECTLY FROM OUTSIDE

FIGURE 9 B - INDIRECTLY FROM THE ADJACENT ROOM

A=AIR INLET  
B=ROOM TO BE VENTILATED  
C=INCREASE OF THE GAP UNDER THE DOOR

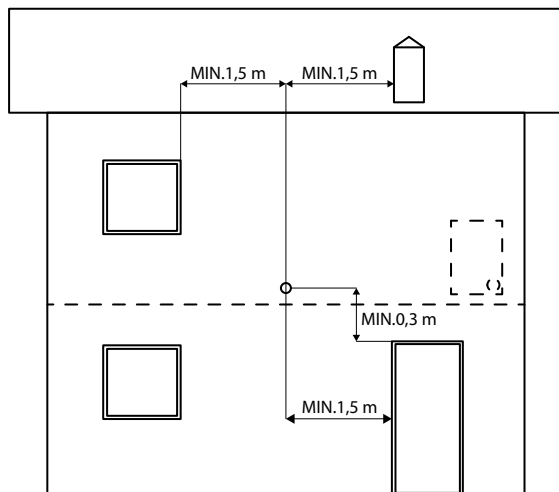

It is possible to connect the air required for combustion directly to the outside air inlet, with a pipe of at least Ø50mm, with maximum length of 3 linear metres; each pipe bend shall be considered equivalent to a linear metre. To attach the pipe see the rear of the stove.

For stoves installed in studio flats, bedrooms and bathrooms (where allowed), it is mandatory to connect the combustion air outside. Specifically for sealed stoves the connection must be sealed in order not to compromise the overall sealing of the system.

FIGURE 10



## 2-INSTALLATION

DISTANCE (metres)	The air inlet must be at a distance of:	
1.5 m	BELOW	Doors, windows, smoke outlets, cavities, ....
1.5 m	HORIZONTALLY	Doors, windows, smoke outlets, cavities, ....
0.3 m	ABOVE	Doors, windows, smoke outlets, cavities, ....
1.5 m	AT A DISTANCE	from smoke outlet

### CONNECTION TO THE FLUE

The connection between the flue and the appliance must be via a smoke duct compliant to EN 1856-2. The connecting section must extend no more than 4 m horizontally, with a minimum slope of 3% and with a maximum of 3 90° bends (accessible for inspection - do not count the Tee fitting at the appliance outlet).

The diameter of the smoke duct must be equal to or greater than that of the outlet of the appliance (Ø 80 mm).

TYPE OF SYSTEM	SMOKE DUCT
Minimum vertical length	1.5 metres
Maximum length (with 1 accessible 90° bend)	6.5 metres
Maximum length (with 3 accessible 90° bends)	4.5 metres
Maximum number of accessible 90° bends	3
Horizontal sections (minimum slope 3%)	4 metres


Use smoke ducts with a diameter of 80mm or 100mm depending on the type of system, with silicone gaskets or similar sealing devices that can withstand the high operating temperatures of the appliance (min. T200 class P1). **The use of flexible metal hoses made of fibre cement or aluminium is forbidden. For direction changes, we always recommend the use of a Tee** fitting with an inspection cap allowing easy access for cleaning the tubes. Always ensure that the inspection cap is put back in place and sealed hermetically with the relevant seal intact after cleaning.

It is prohibited to connect more than one appliance to the same smoke duct, or the discharge from hoods above it. It is forbidden to extract the combustion products directly through the wall, whether into indoor spaces or outdoors.

The smoke duct must be at a minimum distance of 400 mm from flammable or heat-sensitive structures.

## 2-INSTALLATION

### EXAMPLES OF CORRECT INSTALLATION

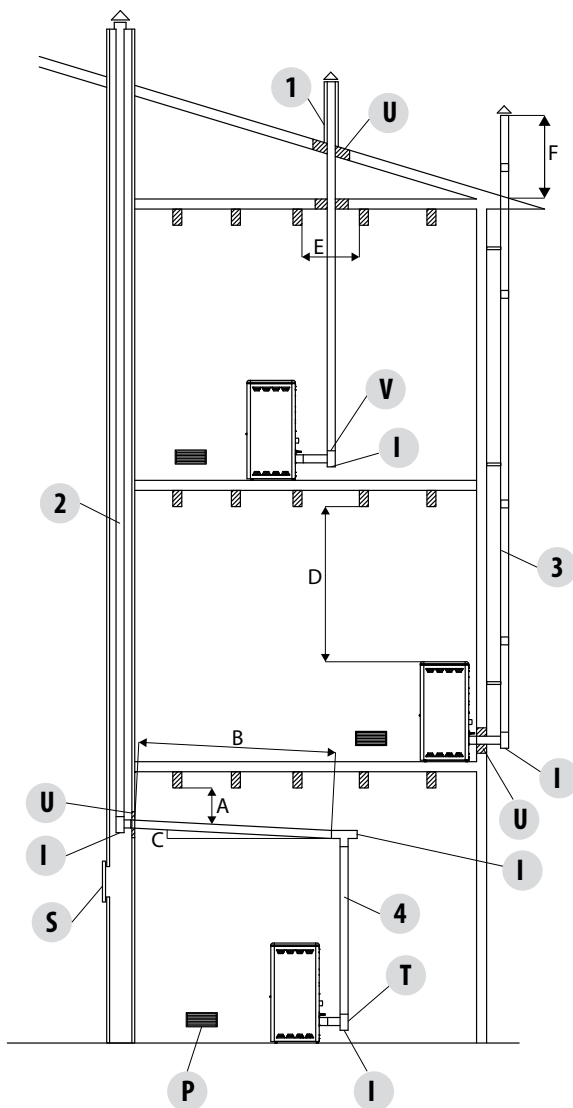

1. Installation of Ø120mm flue with hole for the passage of the pipe increased by:  
 minimum 100mm around the pipe if next to non flammable parts such as cement, brick, etc.; or  
 minimum 300mm around the pipe (or as required by plate data) if next to flammable parts such as wood etc.  
 In both cases, install suitable insulation between the flue and the ceiling.

Always check and comply with the plate data of the flue, specifically the minimum safety distances from combustible materials.

The previous rules also apply for holes made in walls.

2. Old flue, minimum pipe Ø100mm with the inclusion of an external access door for chimney cleaning.

3. External flue made of insulated stainless steel pipes, i.e. with double walls minimum Ø100mm: all securely mounted on the wall. With windproof chimney pot. See fig. 7 type A.

4. Ducting system using Tee fittings that allow easy access for cleaning without having to remove the pipes.

FIGURE 11


U = INSULATION  
 V = ANY REDUCTION FROM 100 TO 80 MM  
 I = INSPECTION CAP  
 S = INSPECTION ACCESS PANEL  
 P = AIR INLET  
 T = TEE FITTING WITH INSPECTION CAP

A = MINIMUM 40 MM  
 B = MAXIMUM 4 M  
 C = MINIMUM 3°  
 D = MINIMUM 400 MM  
 E = HOLE DIAMETER  
 F = SEE FIG. 2-3-4-5-6

3-DRAWINGS AND TECHNICAL FEATURES


DRAWINGS AND CHARACTERISTICS

RAAM COMFORT AIR 8 S1 STOVE DIMENSIONS

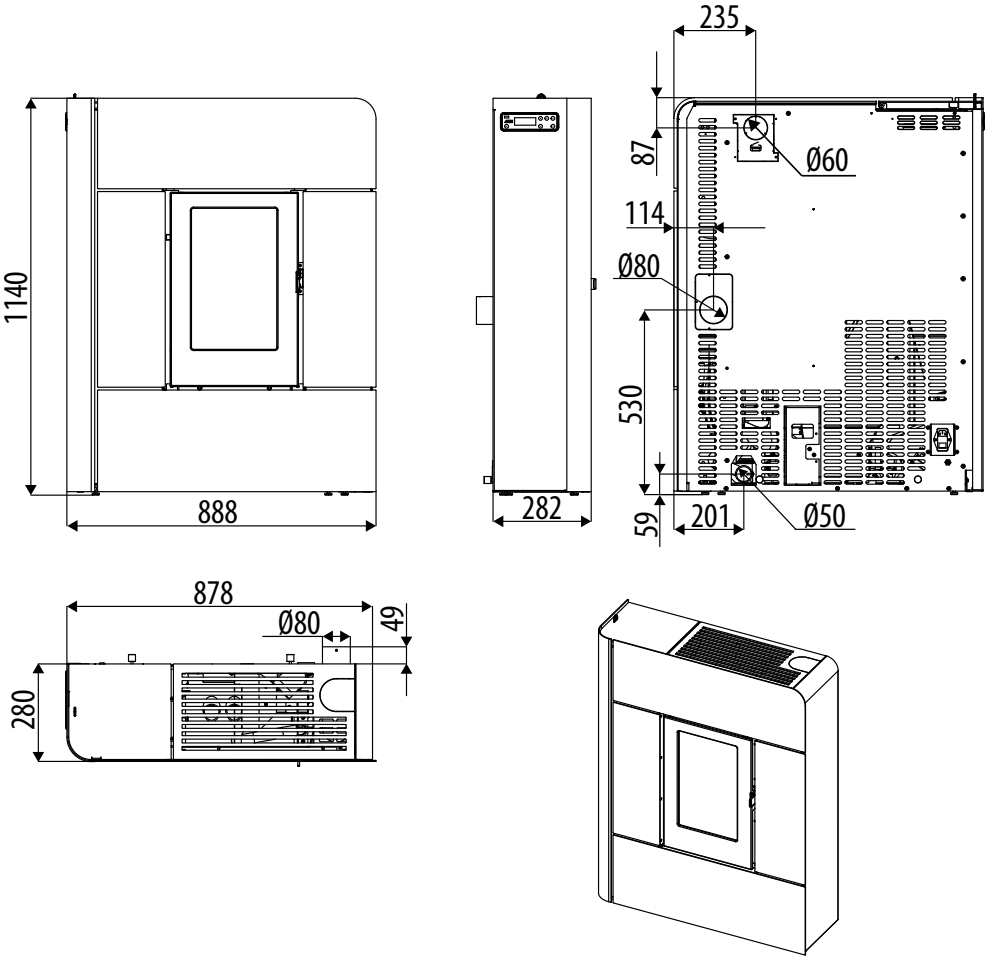

3-DRAWINGS AND TECHNICAL FEATURES

RAAM COMFORT AIR 8 UP! STOVE DIMENSIONS S1

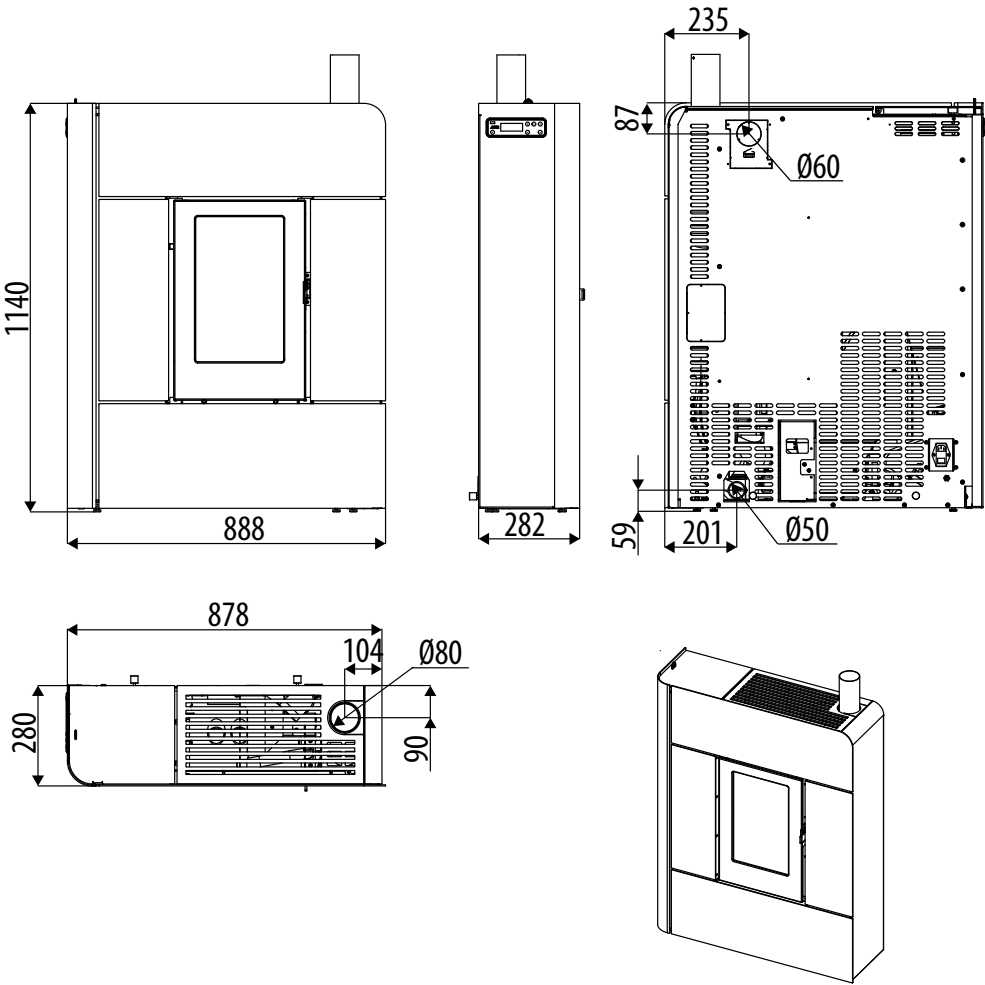

### 3-DRAWINGS AND TECHNICAL FEATURES

TECHNICAL SPECIFICATIONS	RAAM COMFORT AIR 8 S1 / RAAM COMFORT AIR 8 UP! S1
Energy Efficiency Class	A+
Nominal output power	7.8 kW (6708 kcal/h)
Minimum output power	2.5 kW (2150 kcal/h)
Efficiency at Max	90.2%
Efficiency at Min	91.0%
Temperature of exhaust smoke at Max	179 °C
Temperature of exhaust smoke at Min	96°C
Particulate / OGC / Nox (13%O <sub>2</sub> )	11 mg/Nm <sup>3</sup> - 1 mg/Nm <sup>3</sup> - 119 mg/Nm <sup>3</sup>
CO at 13% O <sub>2</sub> at Min and at Max	0.038 – 0.005%
CO <sub>2</sub> at Min and at Max	6.5 - 12.1%
Recommended draught at Max*** power	0.10 mbar - 10 Pa***
Minimum draught allowed at minimum power	0.05 mbar - 5 Pa
Smoke mass	4.7 g/sec
Tank capacity	28 litres
Type of pellet fuel	Pellet diameter 6 mm and size 3 - 40 mm
Pellet hourly consumption	Min ~ 0.5 kg/h* - Max ~ 1.7 kg/h*
Autonomy	At min ~ 36 h* - At max ~ 11 h*
Heatable volume m <sup>3</sup>	168/40 – 192/35 – 224/30 **
Combustion air inlet	Ø 50 mm
Smoke outlet	Ø 80 mm
Air inlet	80 cm <sup>2</sup>
Rated electrical power (EN 60335-1)	100 W (Max 340 W)
Supply voltage and frequency	230 Volt / 50 Hz
Net weight	155 kg
Weight with packaging	170 kg
Distance from combustible material (back/side/under)	30 mm/100 mm/0 mm
Distance from combustible material (ceiling/front)	800 mm/1000 mm

\* Data that may vary depending on the type of pellets used

\*\* Volume that can be heated, according to the power requirement per m<sup>3</sup> (respectively 40-35-30 Kcal/h per m<sup>3</sup>)

\*\*\*Value recommended by the manufacturer (non-binding) for optimal product operation

**Tested according to EN 14785 in accordance with European regulation for Construction Products (EU 305/2011).**

## 4-UNPACKING

### PREPARATION AND UNPACKING

The packaging consists of a recyclable cardboard box in line with RESY standards and a wooden pallet. All packaging materials can be reused for similar use or disposed of as urban solid waste, in accordance with current regulations.

After having removed the packaging make sure the product is intact.




Handle the product with suitable means paying attention to the applicable safety regulations in force. Do not turn the packaging over and handle the majolica parts with care.

The stove is delivered in one package for the structure and one for the metal cladding. Open the package, remove the cardboard, polystyrene and any straps and position the stove in the preset place making sure that it complies with the requirements.

The stove body or unit must always be kept in a vertical position when handled, and handled using trolleys only. Pay particular attention to the door and its glass, protecting them from mechanical knocks that would compromise their integrity.


If possible, unwrap the stove near the chosen area of installation.

The packaging materials are neither toxic nor harmful.

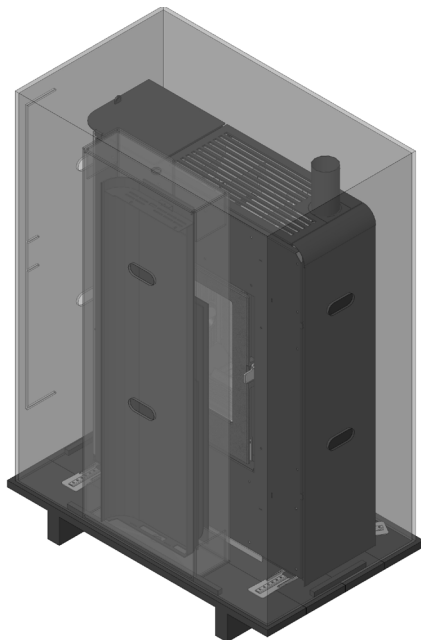


STRUCTURE + METAL CLADDING PACKAGING

## 4-UNPACKING

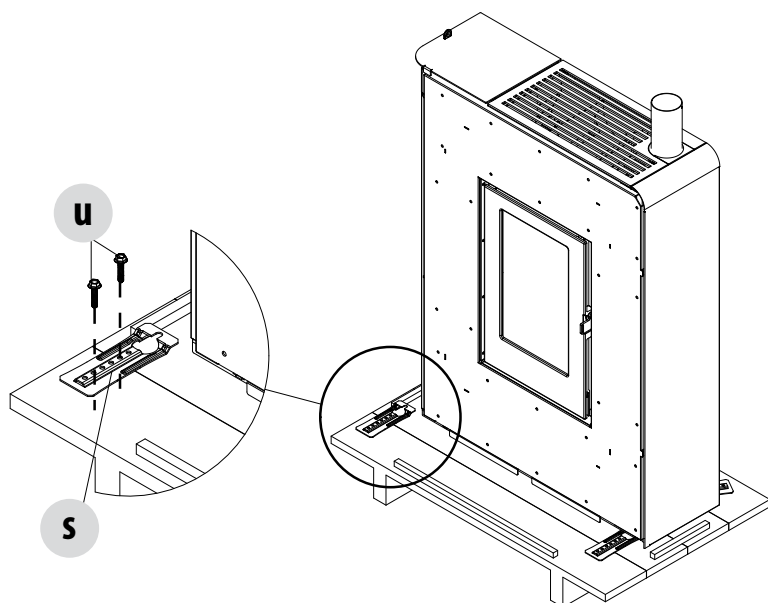

REMOVING THE FASTENING BRACKETS

To remove the stove from the pallet, you must remove the two screws “u” and plate “s” from the stove’s foot. There are four brackets “s”. Moreover, at the back of the stove, remove bracket “t” by taking out the two screws “v” and the two screws “z”.

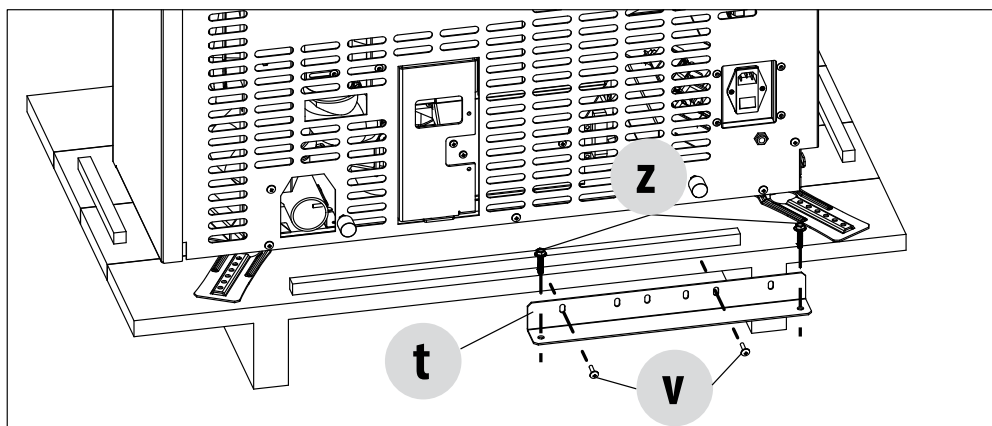


## 4-UNPACKING

Position the stove and connect it to the flue. Use the 4 adjustable feet (**J**), to get the stove correctly levelled so that the smoke outlet is lined up with the connecting pipe.

If the stove needs to be connected to an outlet pipe which goes through the rear wall (to connect to the flue), take utmost care to make sure that the joint is not forced.



***If the stove smoke outlet is forced or used improperly to lift it or position it, the operation of the stove can be damaged irreparably.***

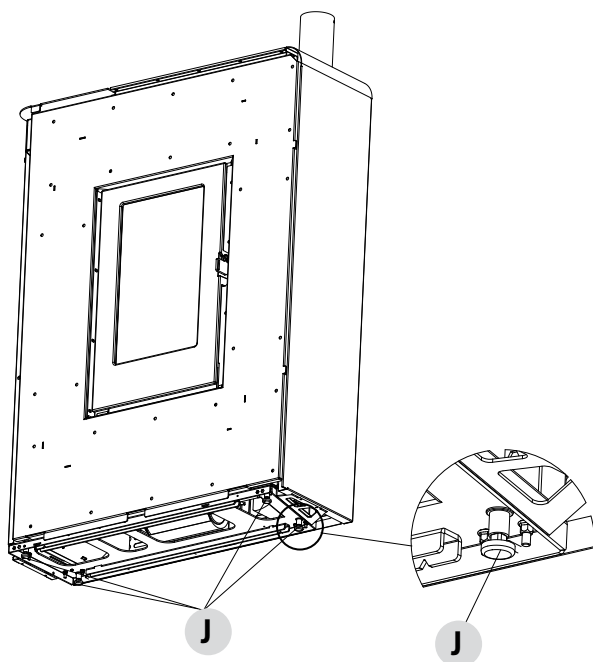

1. TURN THE FEET CLOCKWISE TO LOWER THE STOVE
2. TURN THE FEET ANTICLOCKWISE TO RAISE THE STOVE




## 5-CONNECTION OF THE TOP SMOKE OUTLET PIPE

### TOP OUTLET (COD.7118037 - RAAM COMFORT AIR 8 UP! STOVE S1)

Proceed as follows to complete the installation:

- remove the top (as indicated on the following pages)
- remove the right side panel (as indicated on the following pages)
- insert pipe "V" (not supplied with the stove) into the top pipe "P" of the smoke box
- from the material supplied with the stove, take flange "F" and the two screws "X"

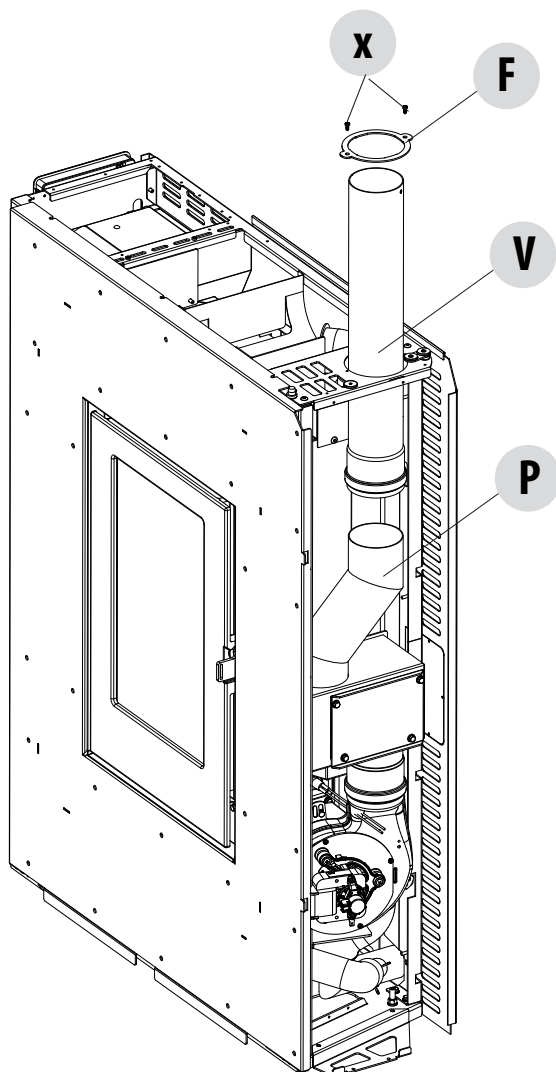


## 5-CONNECTION OF THE TOP SMOKE OUTLET PIPE

- tighten the two screws "X" on the flange "F" against the pipe "V" to prevent the pipe from vibrating.
- go ahead with the installation of the stove




**Attention! Carefully insert flange "F" into pipe "V" so as not to scratch the pipe.**

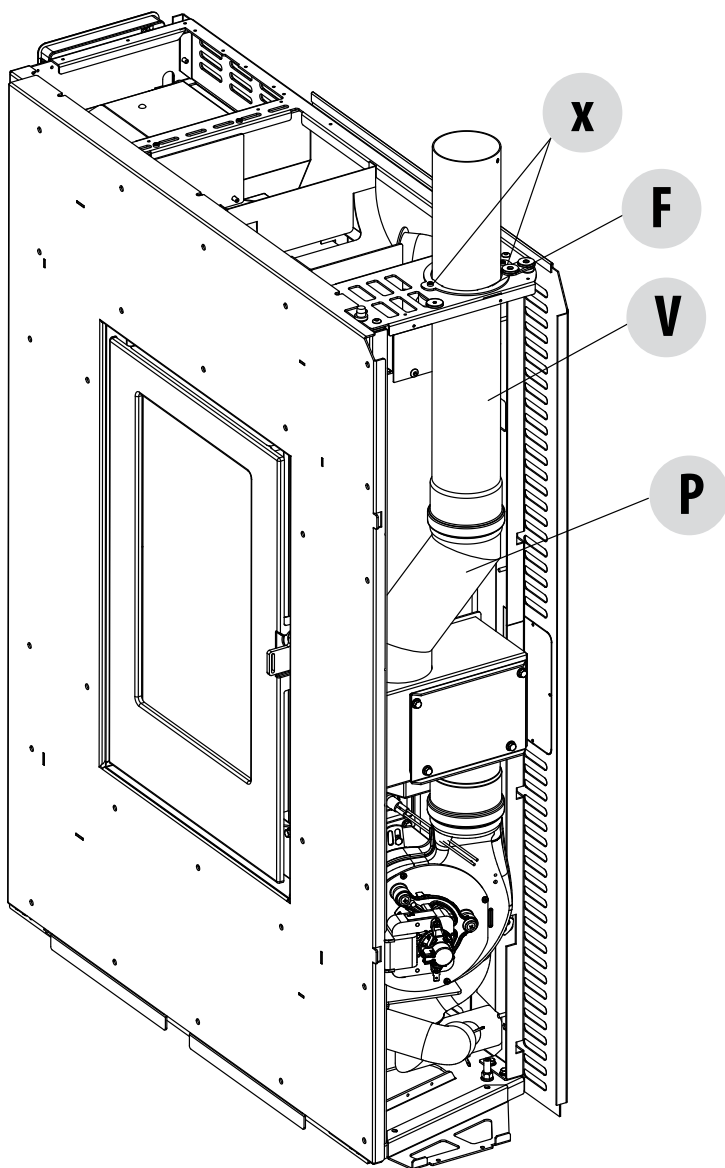

## 6-CONNECTION OF THE REAR SMOKE OUTLET PIPE

### REAR OUTLET (COD.7118003 - RAAM COMFORT AIR 8 S1 STOVE)

The Raam stove with rear outlet will already have the bend "H" installed as shown in the image, so the external smoke pipe can be connected to the stove

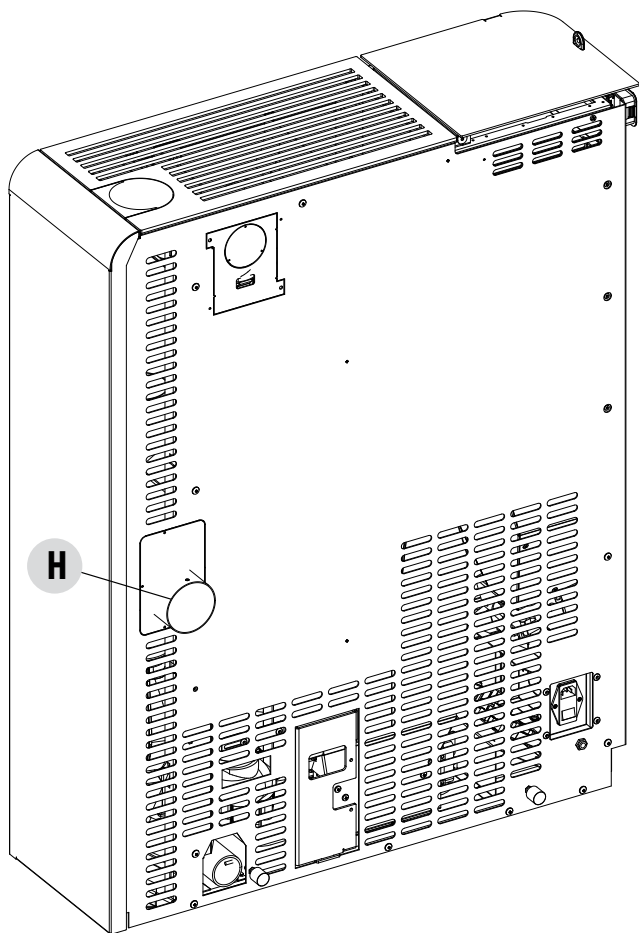


## 7-COMFORT AIR

### Comfort Air ducting

Comfort Air stoves can channel the air into other rooms through the connection with the accessory pipes. One outlet can be ducted. If you do not want to duct hot air, it is introduced into the room through the top grid of the stove.




**The air outlet pipe can reach very high temperatures, even up to 150°C: insulate it properly with suitable materials in areas where it may come into contact with flammable surfaces or surfaces that are affected by temperature (e.g. discolouration of paint, ducts for electric cables, plasterboard, etc.). Also protect people and animals from voluntary or accidental contact. Comply with the regulations and laws in force in the region where the product is installed. It is recommended to insulate the entire length of the pipe in order to reduce dispersion and increase heat output in the room.**

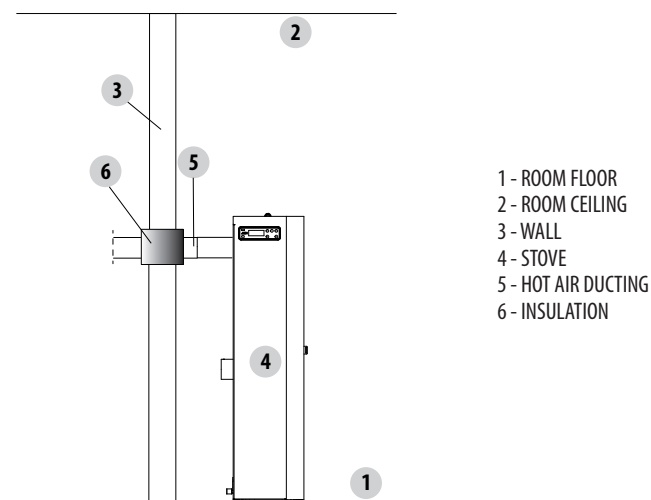


Proceed as follows for ducting:

- use a drill to make four holes on the top part of the back on the knockout hole "U"
- Remove knockout hole "U"

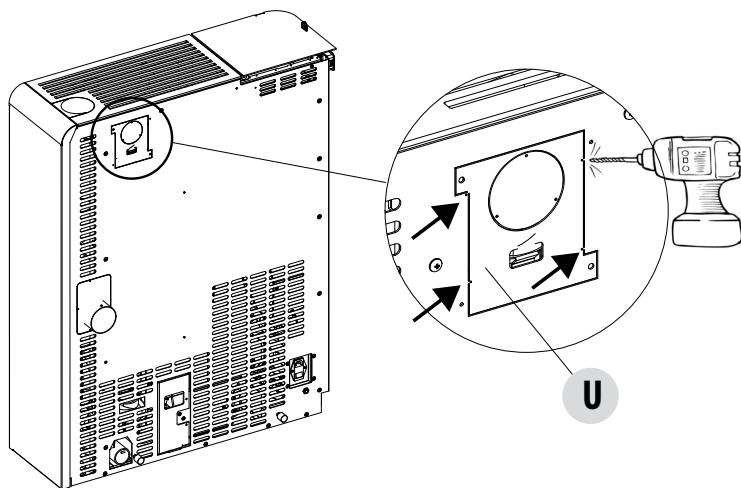


## 7-COMFORT AIR

drill the centre knockout hole to let the air ducting pipe come out

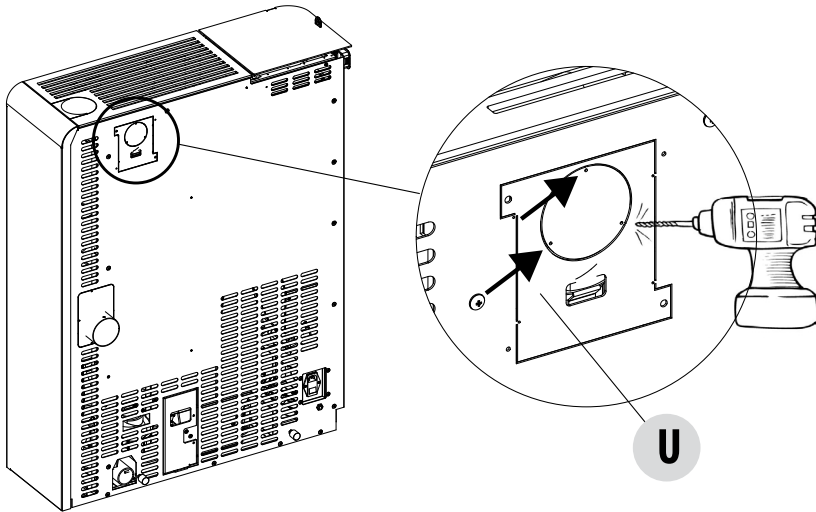


- remove the screw "x" and fastening bracket "s" of the pipe

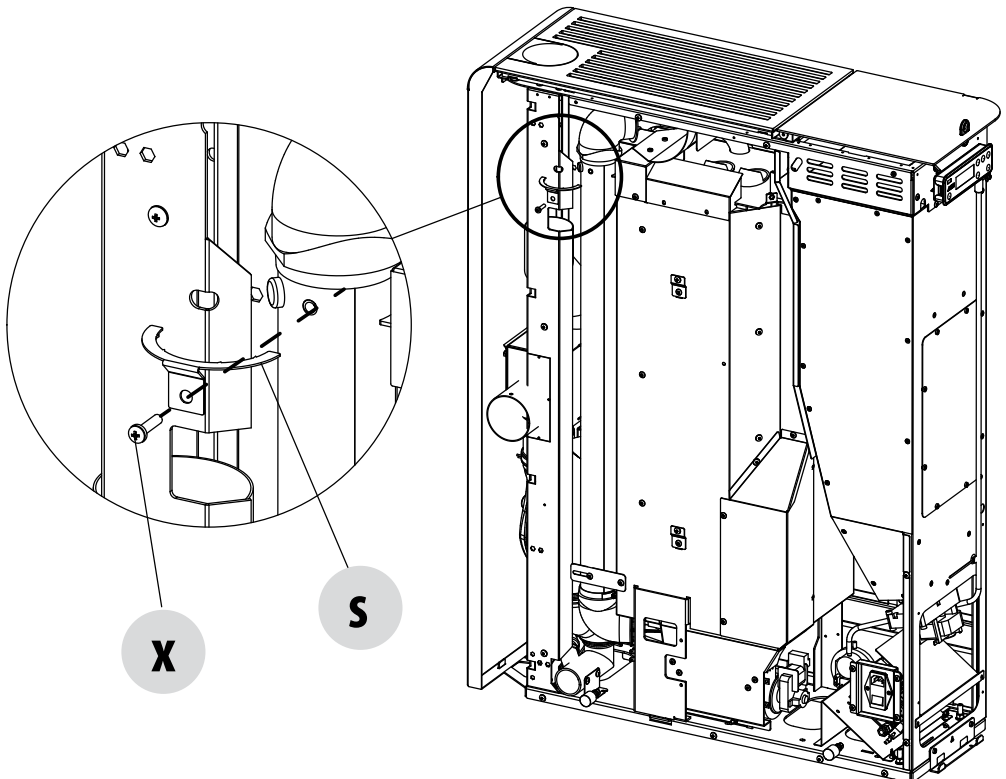


## 7-COMFORT AIR

- turn the pipe "T" to make it come out from the hole at the back
- secure the pipe "T" with the screw "X" and bracket "S"



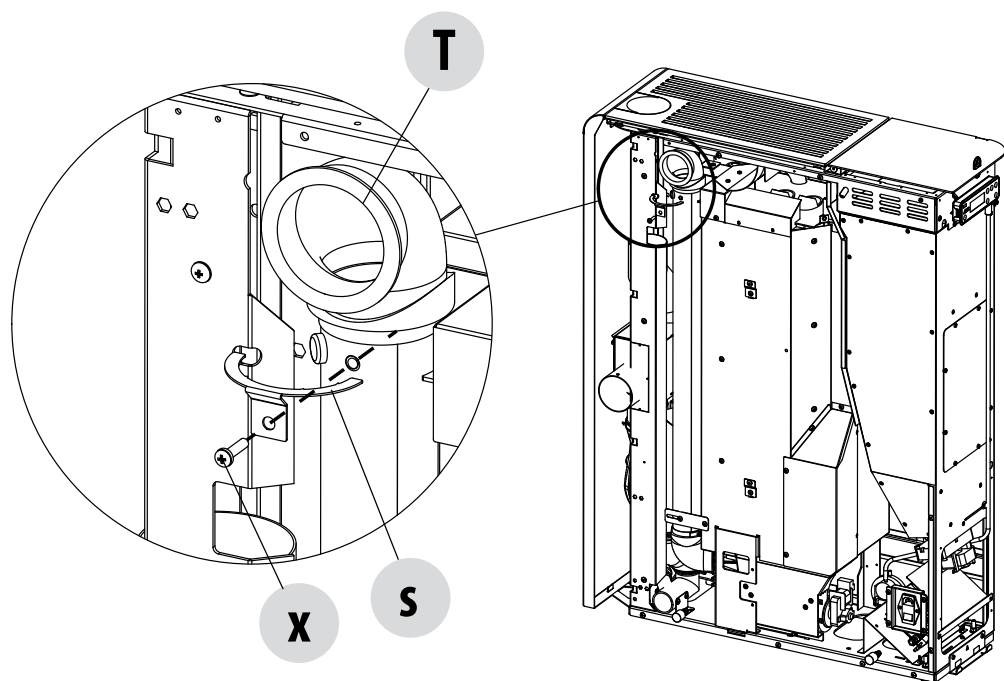


## 7-COMFORT AIR

- using the supplied screws, secure the mirrored knockout hole so that the two holes provided on the back next to the knockout hole "U" are used in order to secure it

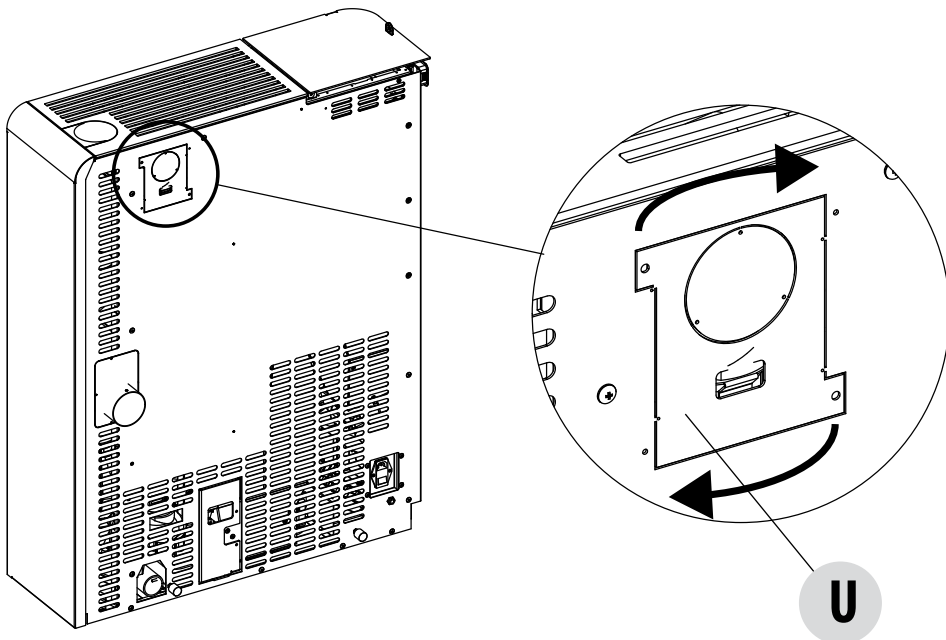

- as described above, secure the plate "U" (figure 1)
- to facilitate ducting, we recommend installing the pipe "J" and fixing it to the inlet "T" using the clamp "f" (see figure 2/3) - (material not supplied - code 4009008 pipe diam.6 with two clamps)
- proceed with the ducting using the flexible hoses (not included) secured to pipe "J" using the other clamp (supplied with the optional kit code 4009008)

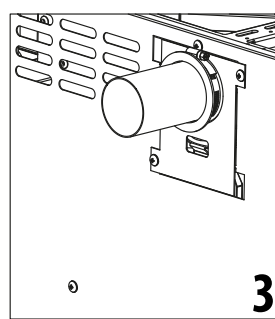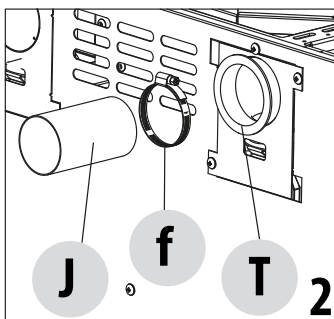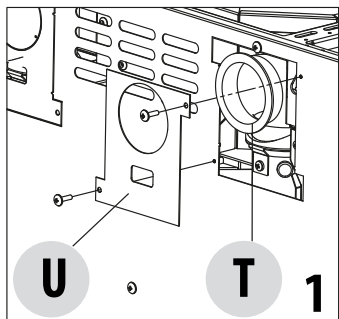


## 8-CLADDING INSTALLATION/REMOVAL

The stove is delivered without the metal cladding in both stove versions, whether it has a top outlet (UP!) or a rear outlet. The following are indications for installing the cladding and removing some parts of the stove for technical interventions, parts replacement and/or cleaning.




**Live electrical parts: only power the product once it has been fully assembled.**

### RAAM COMFORT AIR 8 UP! STOVE S1 (VERSION WITH TOP OUTLET)

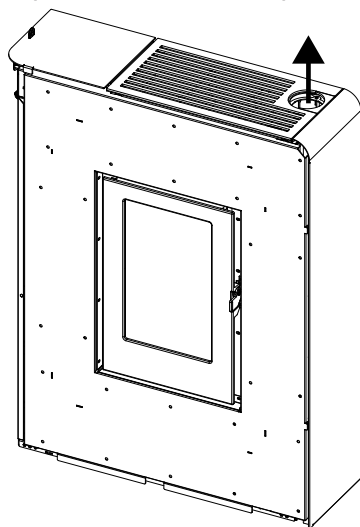

### RAAM COMFORT AIR 8 S1 STOVE (VERSION WITH REAR OUTLET)

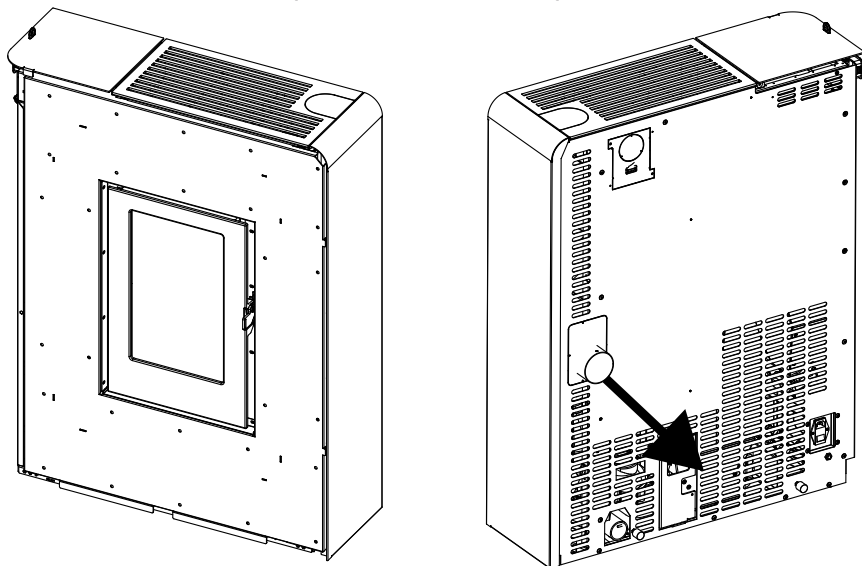




8-CLADDING INSTALLATION/REMOVAL

METAL CLADDING FOR BOTH VERSIONS OF STRUCTURES

The system used to install the cladding is the same for both the stove version with a top outlet and rear outlet (RAAM COMFORT AIR 8 UP! S1/RAAM COMFORT AIR 8 S1 STOVE).

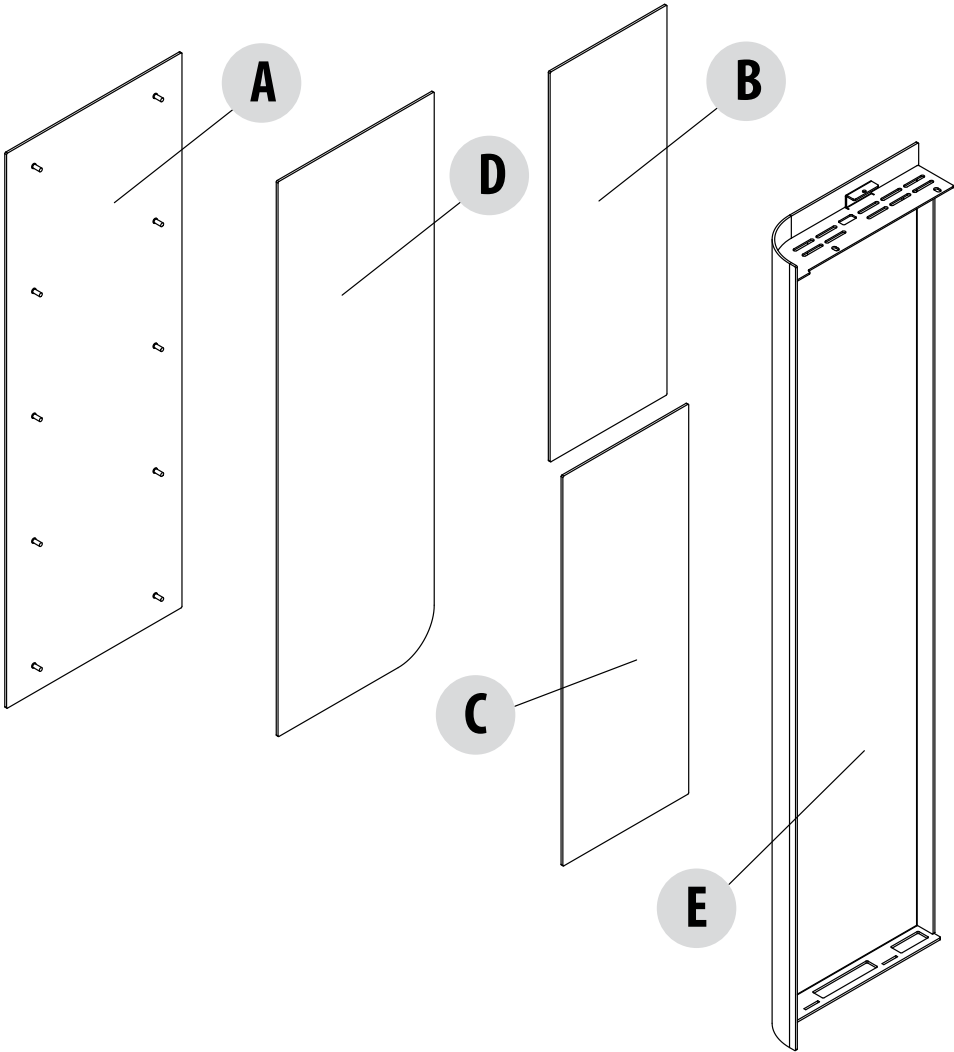


Attention! The decorative parts are delicate, therefore handle with care.

POS.	DESCRIPTION	No.	POS.	DESCRIPTION	No.
A	LOWER PANEL	1	E	LEFT SIDE PANEL	1
B	RIGHT SIDE PANEL	1	x	SILICONE BUMPER	1
C	LEFT SIDE PANEL	1	y	M4X12 SCREW	2
D	UPPER PANEL	1	z	M5 NUT	28

8-CLADDING INSTALLATION/REMOVAL



FRONT METAL CLADDING LAYOUT

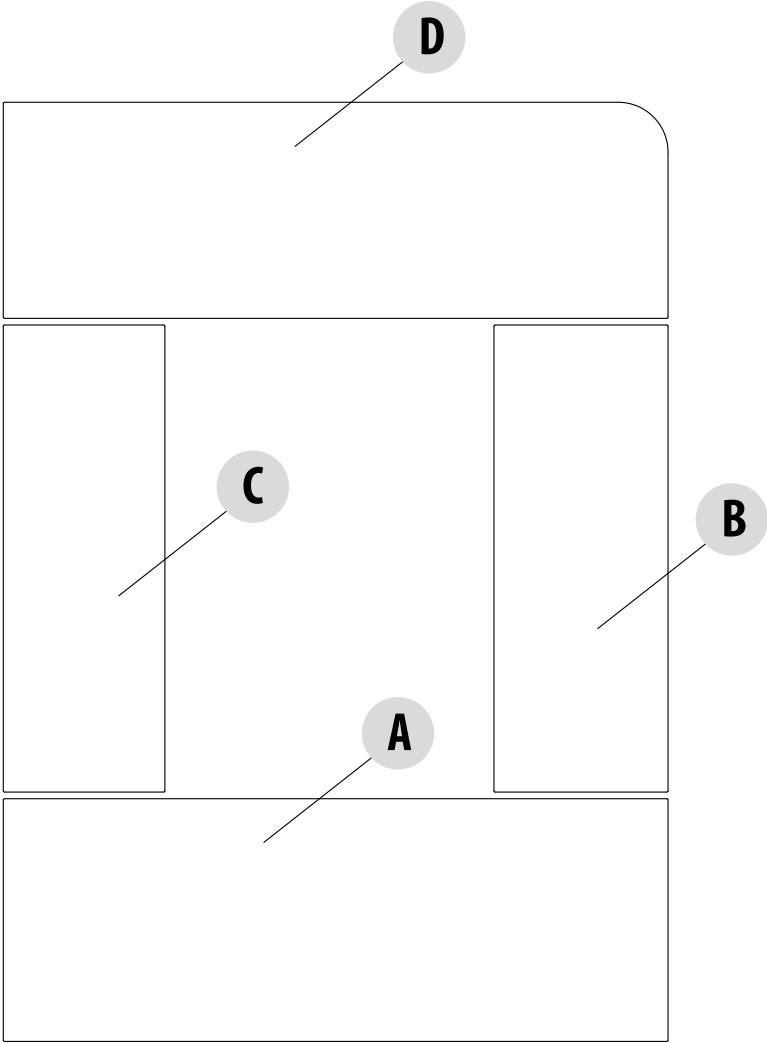

## 8-CLADDING INSTALLATION/REMOVAL

### DISASSEMBLING THE TOP

Lift the top cover "J" and remove the two screws "x" that secure the entire top "H" to the structure of the stove. Lift the top "H" and put it in a safe place until it is used again.

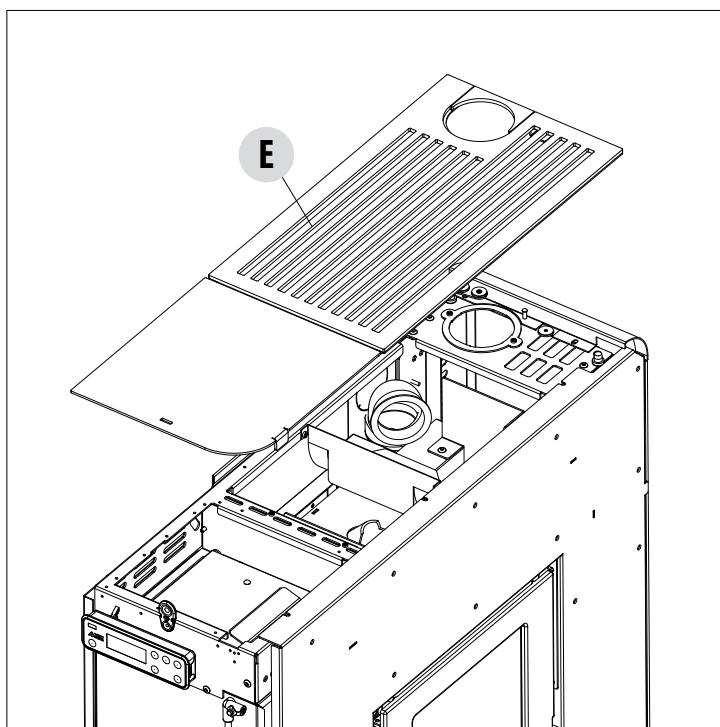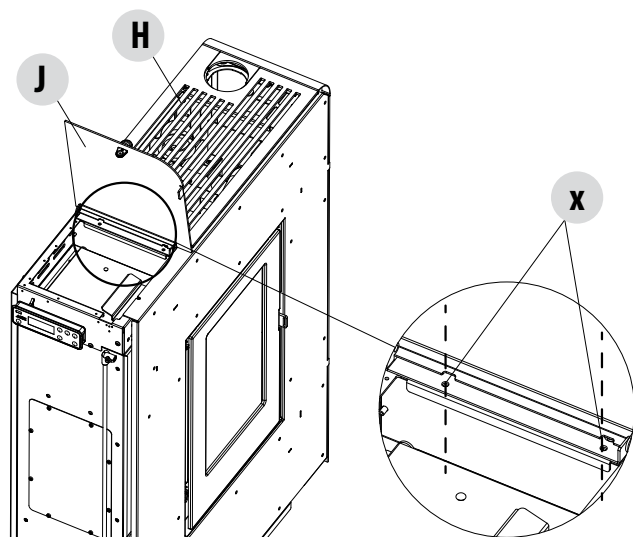


## 8-CLADDING INSTALLATION/REMOVAL

### RIGHT SIDE PANEL DISASSEMBLY


To disassemble the right-hand side panel "F", proceed as follows:

- loosen the two screws "p" so that the panel holes "F" come out from the structure

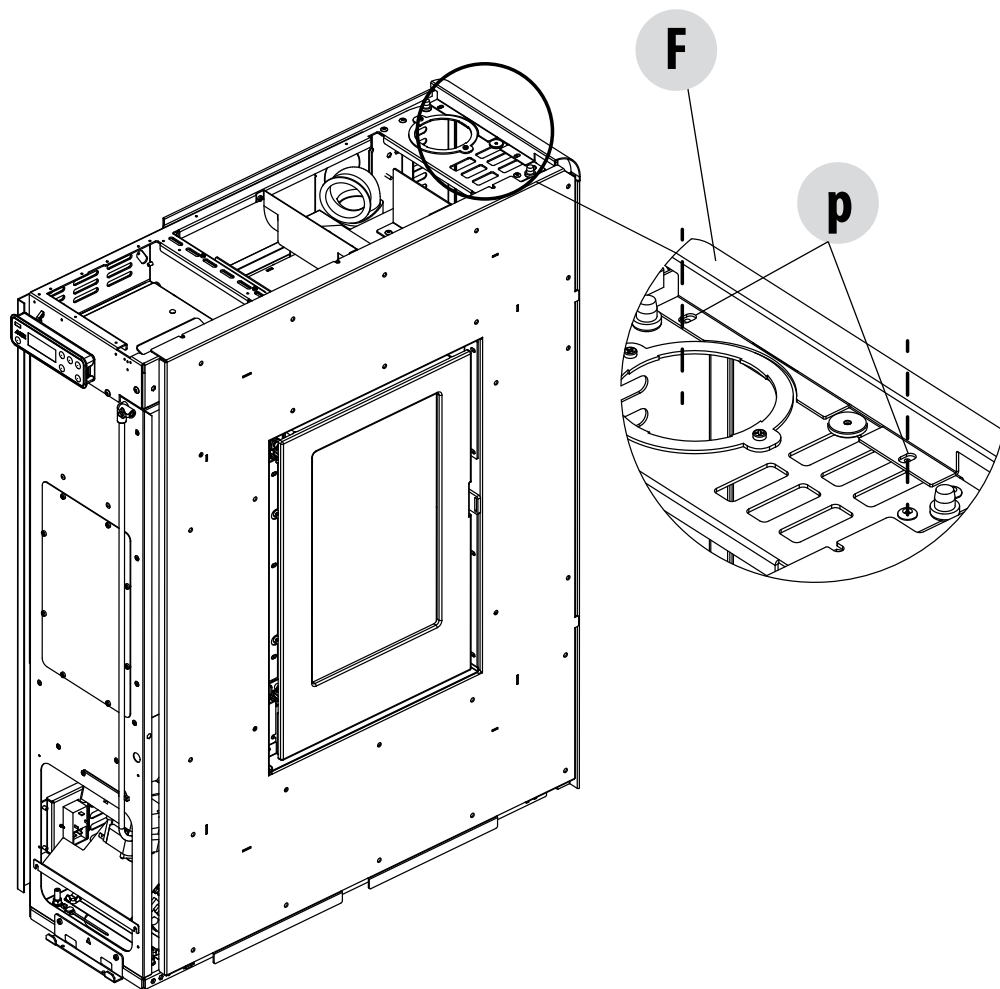

## 8-CLADDING INSTALLATION/REMOVAL


- lift the panel "F" so that the holes "v" come out from the hooks "s" positioned on the stove's structure
- remove panel "F"

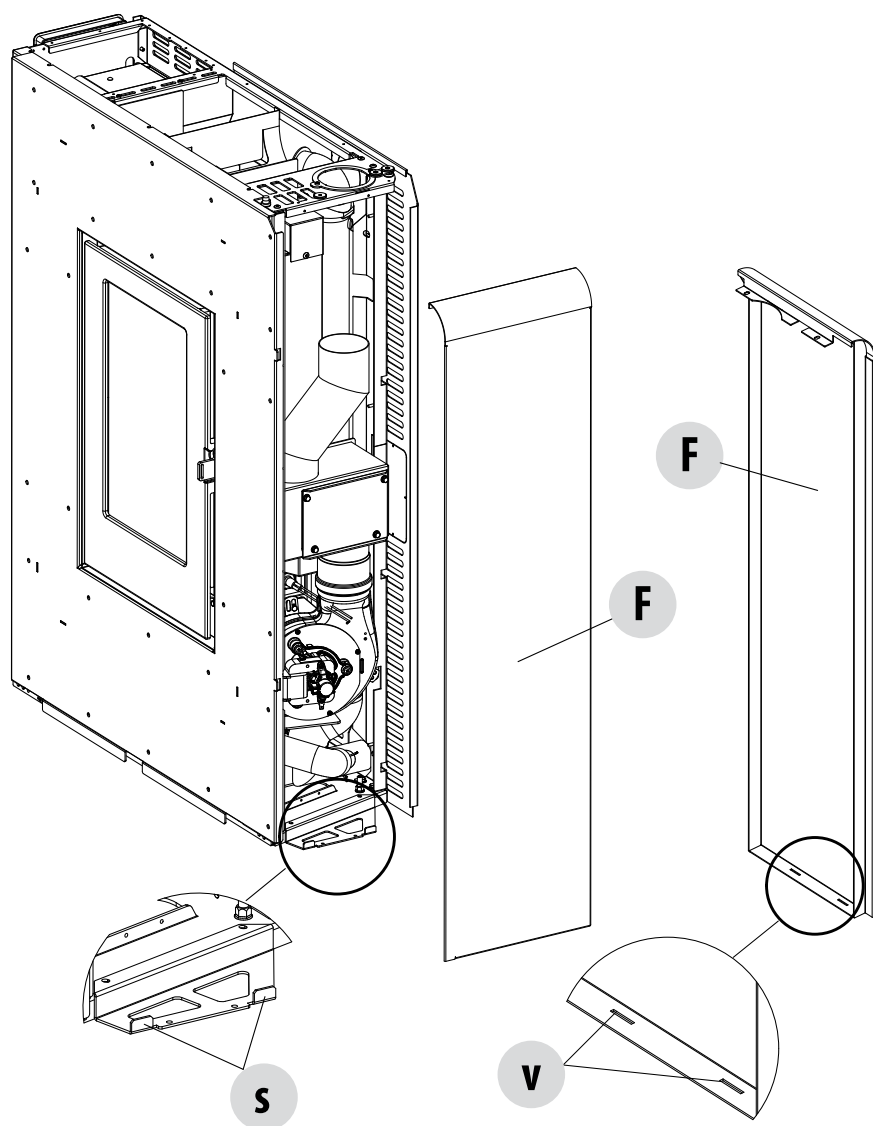

## 8-CLADDING INSTALLATION/REMOVAL

### DOOR DISASSEMBLY


Open the firebox door "Q" with the cold handle supplied. Lift the door "Q" so that the door detaches itself from the stove's structure.

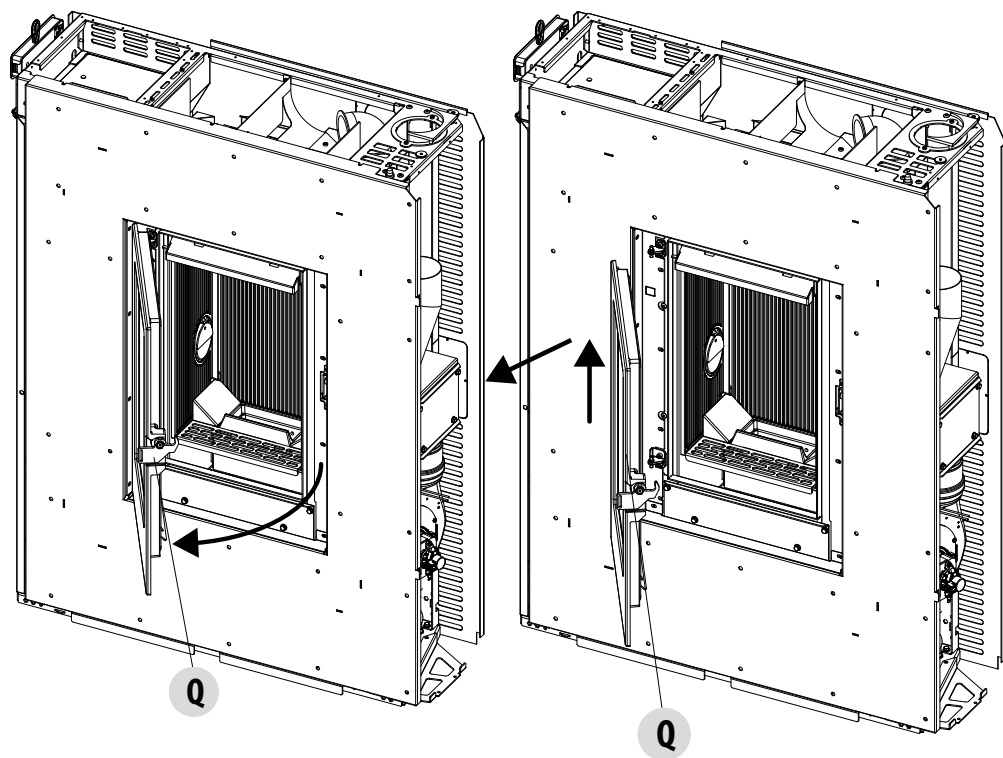

## 8-CLADDING INSTALLATION/REMOVAL

### DISASSEMBLY OF THE UNDER-DOOR PROFILE

Remove the two screws "X" and remove the under-door profile "R"

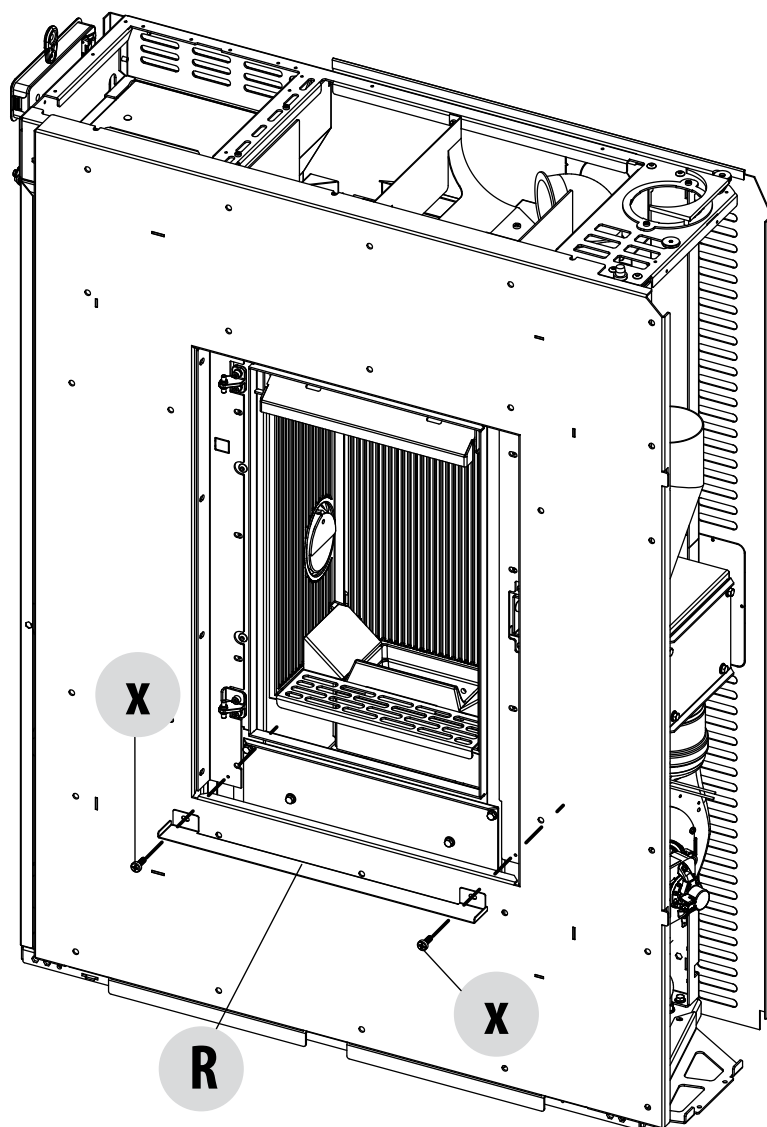


## 8-CLADDING INSTALLATION/REMOVAL

### REMOVING THE FRONT PANEL

To remove the front panel "G", proceed as follows:


- loosen the three screws "X"

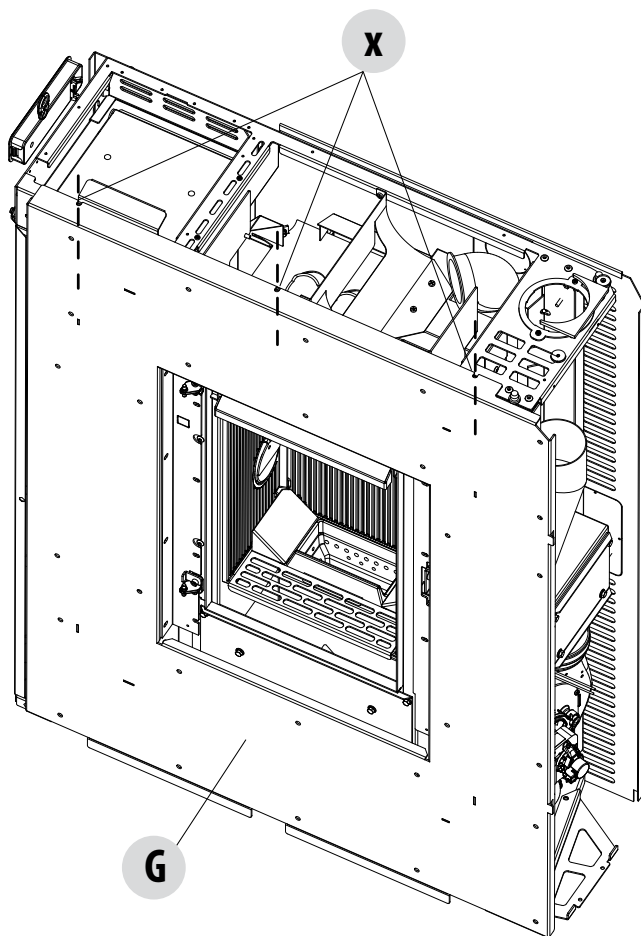




## 8-CLADDING INSTALLATION/REMOVAL

- remove the four + four screws "x" from inside the left and right side of the firebox

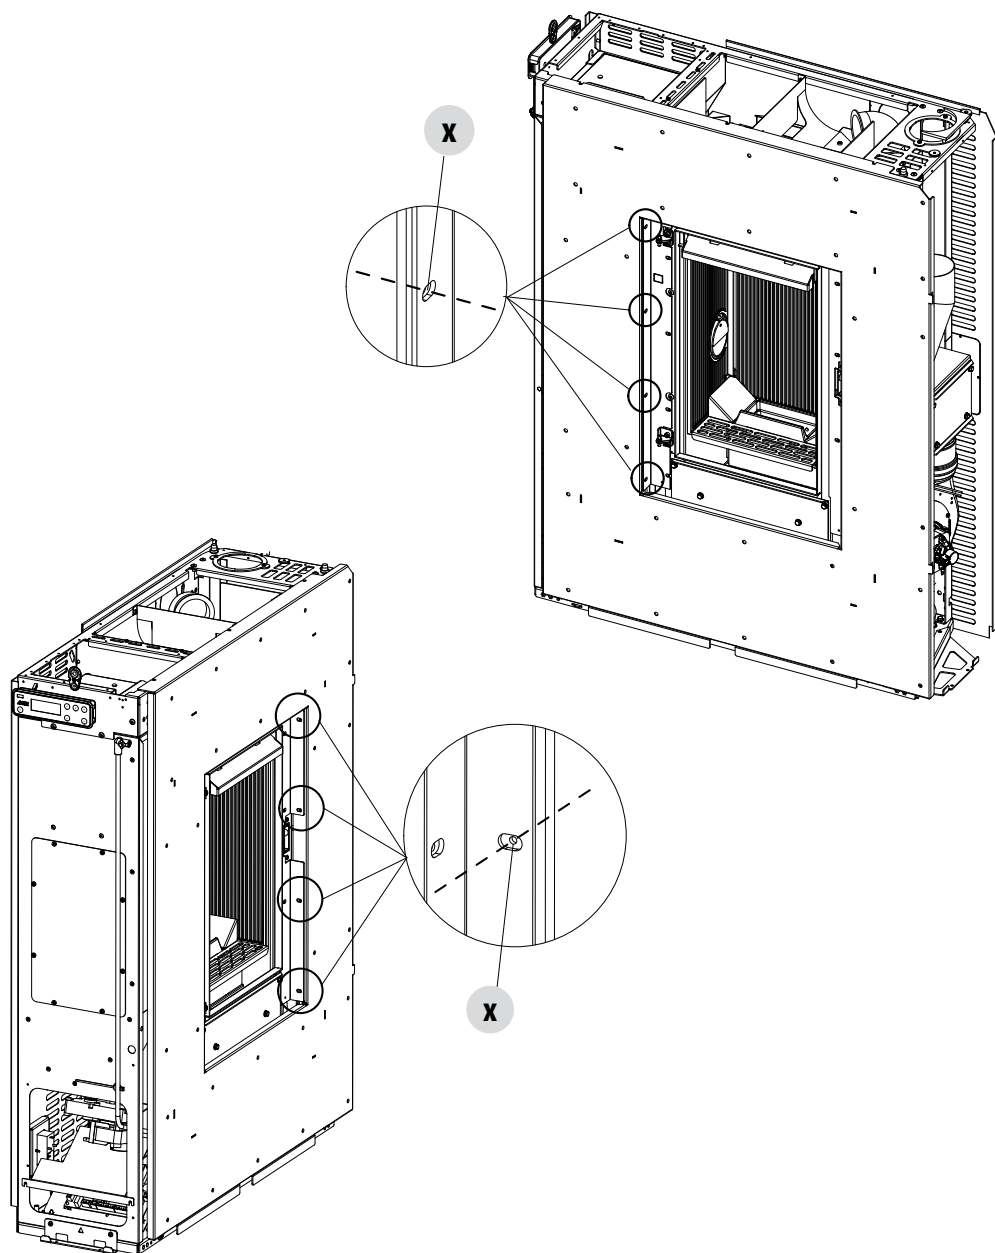

## 8-CLADDING INSTALLATION/REMOVAL

- lift the panel "G" so that the holes "s" come out from the hooks "t" positioned on the stove's structure  
At this point, it is possible to start assembling the cladding onto the panel "G".

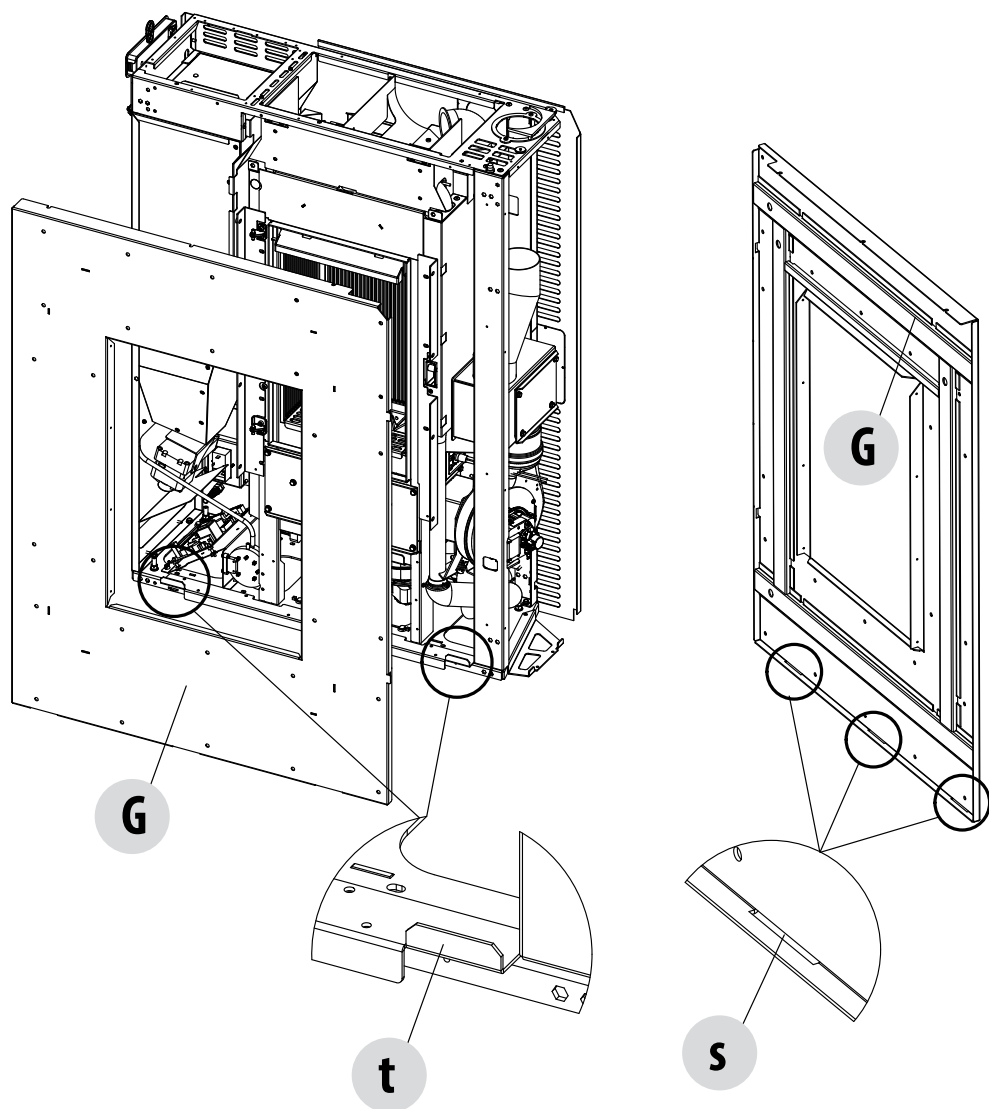


## 8-CLADDING INSTALLATION/REMOVAL

### CLADDING ASSEMBLY

Take the cladding from the package and assemble it:

- the panel "A" must be secured in the lower part with the 10 nuts "z" supplied
- the two side panels "B" and "C" must be secured with 4 nuts "z" each
- the top panel "D" with 10 nuts "z"

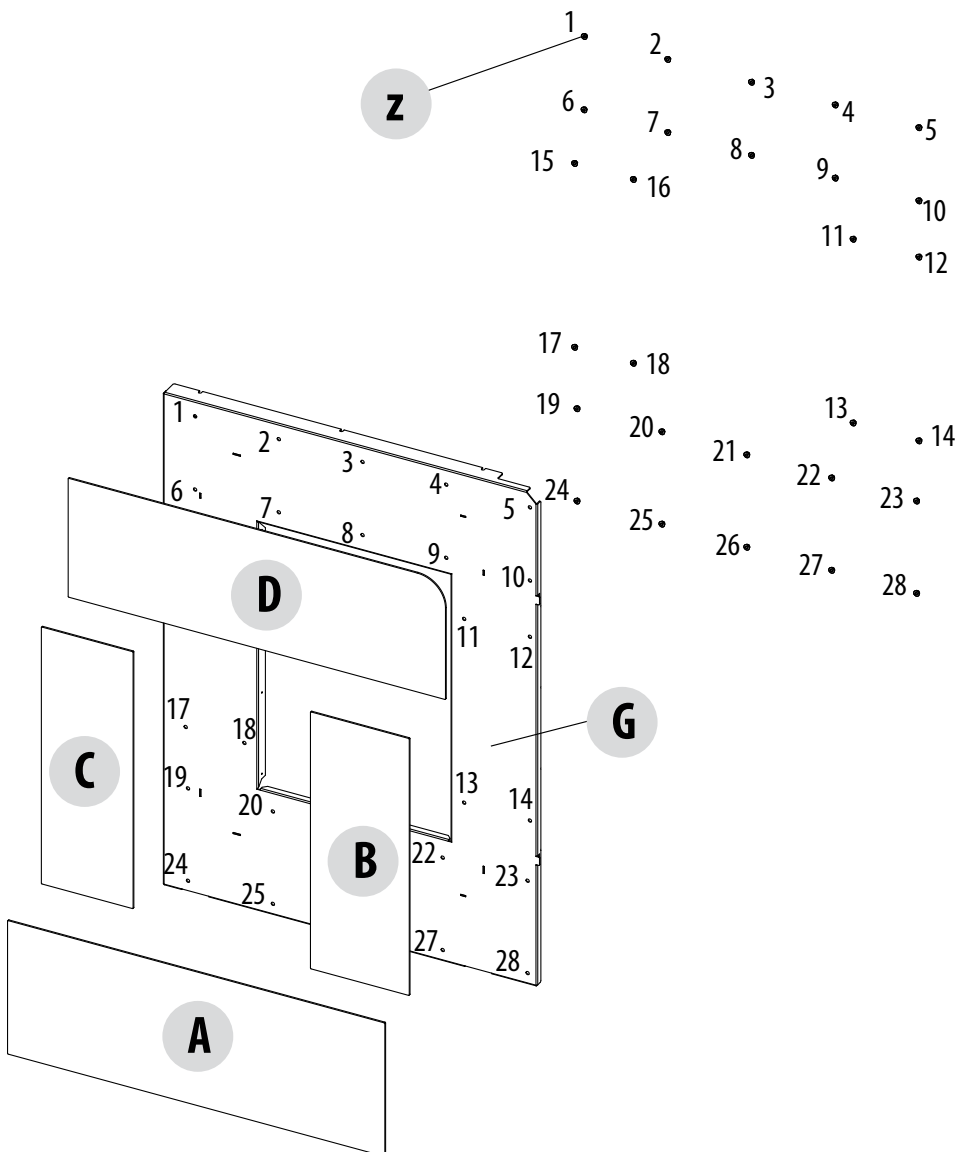


## 8-CLADDING INSTALLATION/REMOVAL

### ASSEMBLING THE FRONT PANEL WITH THE CLADDING

Now take panel "G" with all the cladding installed and fix it to the structure (see instructions in the previous pages).

The installation sequence is as follows:


- insert the panel in the lower part of the structure
- secure the screws inside the opening of the firebox (door area)
- secure the panel in the upper part

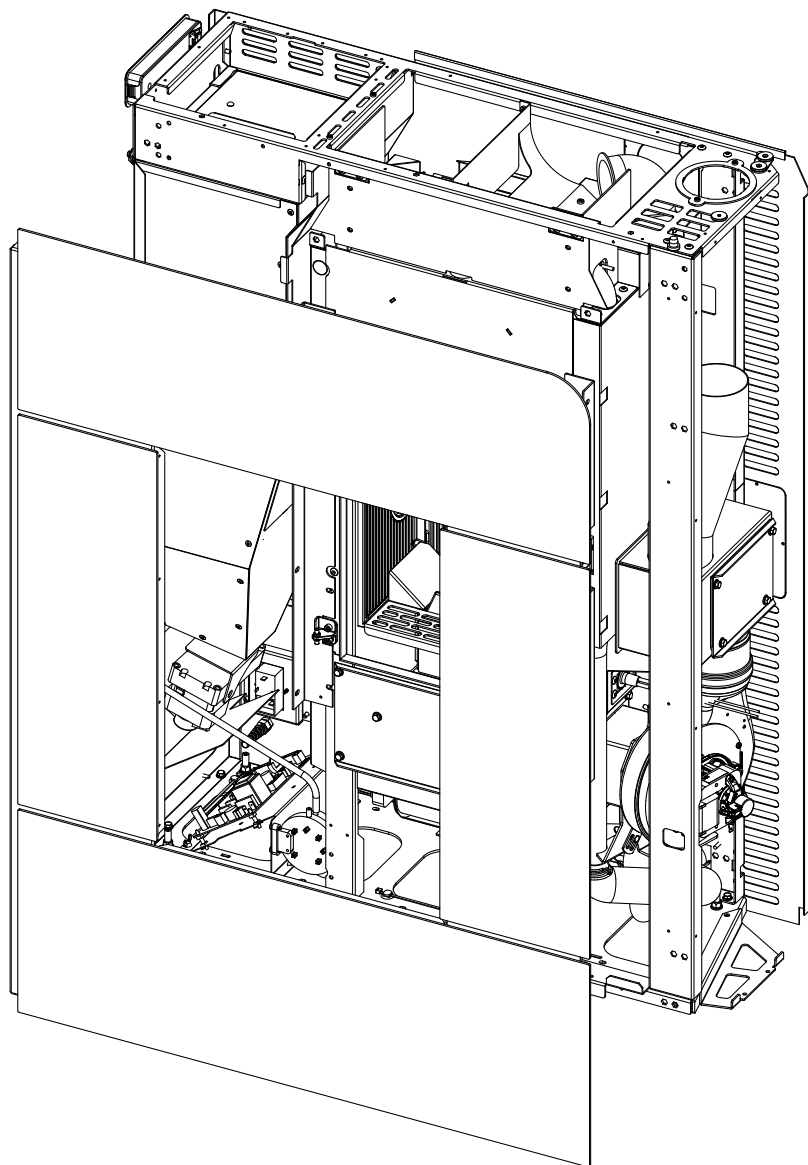

## 8-CLADDING INSTALLATION/REMOVAL

### ASSEMBLING THE FIREBOX DOOR PROFILE


Take profile "R" and secure it with the two screws (see instructions in the previous pages).

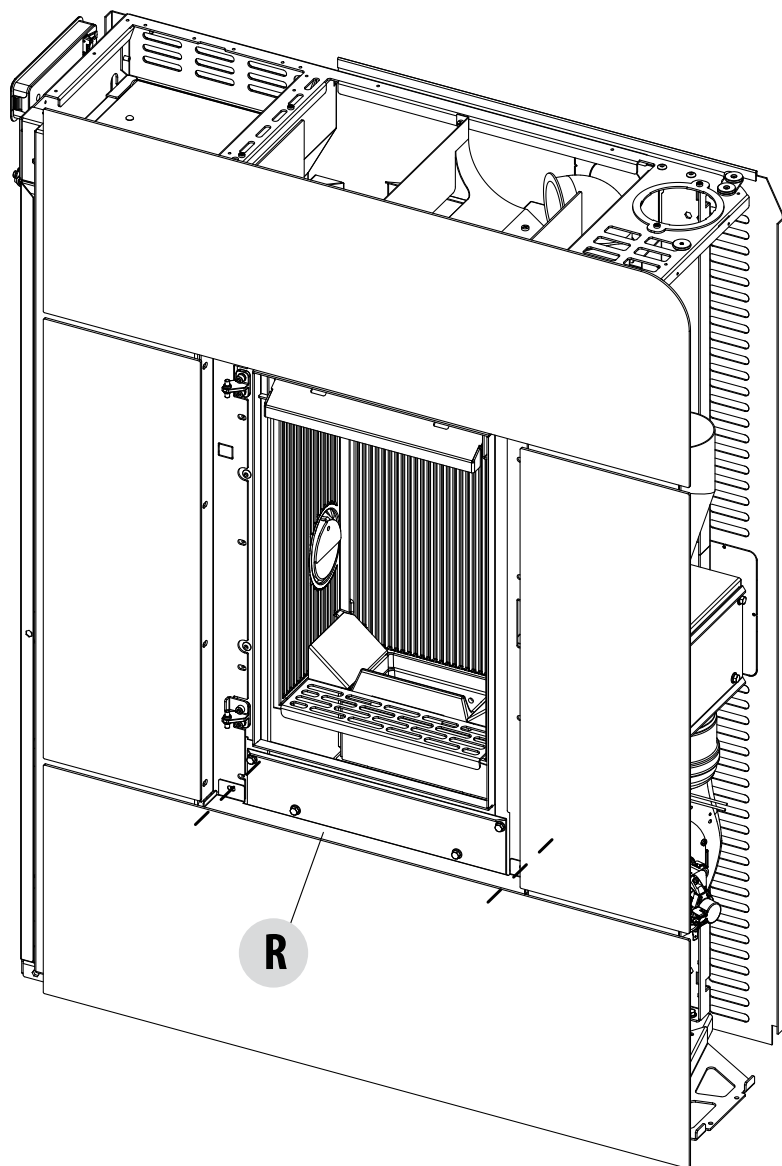

## 8-CLADDING INSTALLATION/REMOVAL

### DOOR ASSEMBLY


Take the firebox door “Q” and make sure that the hole “s” goes into the pin “v” in the top and bottom part. The door is now installed and can be closed by using the cold handle supplied.

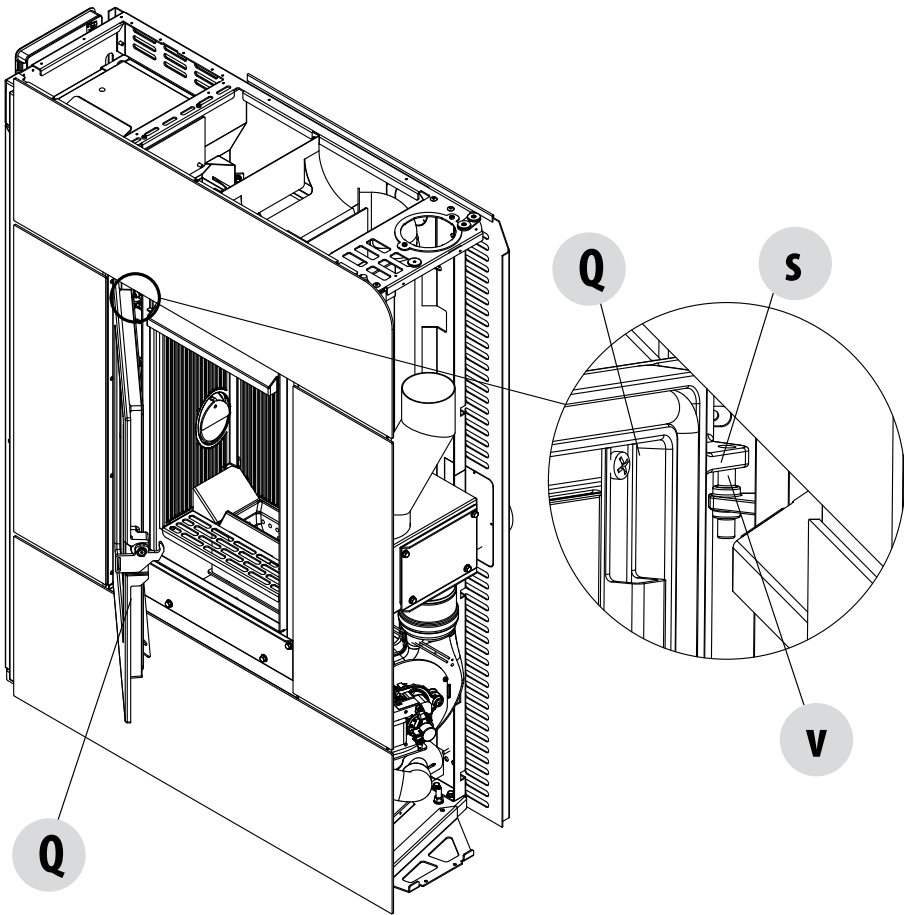

## 8-CLADDING INSTALLATION/REMOVAL

### RIGHT PANEL ASSEMBLY

Take the panel "F" and reassemble it onto the stove, as per instructions in the previous pages (couple the lower part and secure the upper part with the screws)

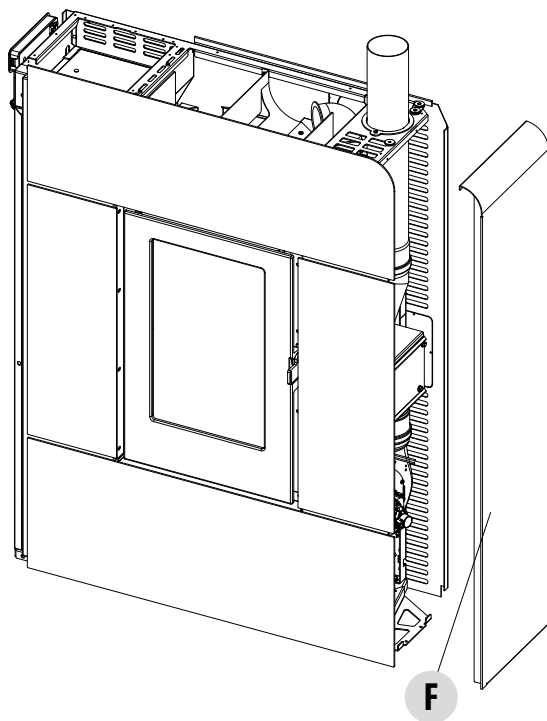



## 8-CLADDING INSTALLATION/REMOVAL

### LEFT PANEL ASSEMBLY



Take the panel "E" with the two screws "y" from the package and proceed as follows:


- insert the two holes "s" into the lower part into the hooks "v" on the structure
- tilt the control panel "L" and make it pass through the hole provided on the panel "E" and secure it

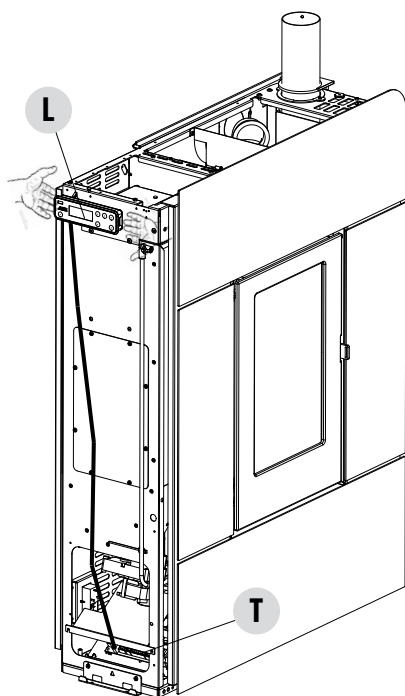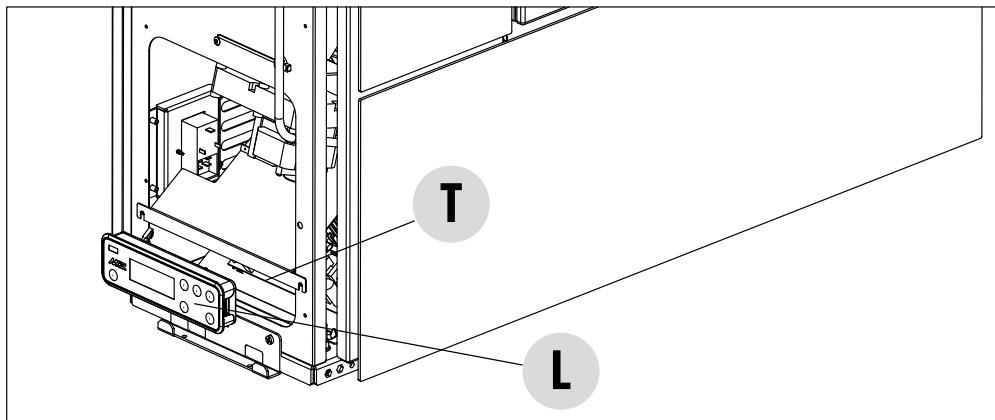




## 8-CLADDING INSTALLATION/REMOVAL

- secure the two screws “p” so that panel “E” is secured to the structure

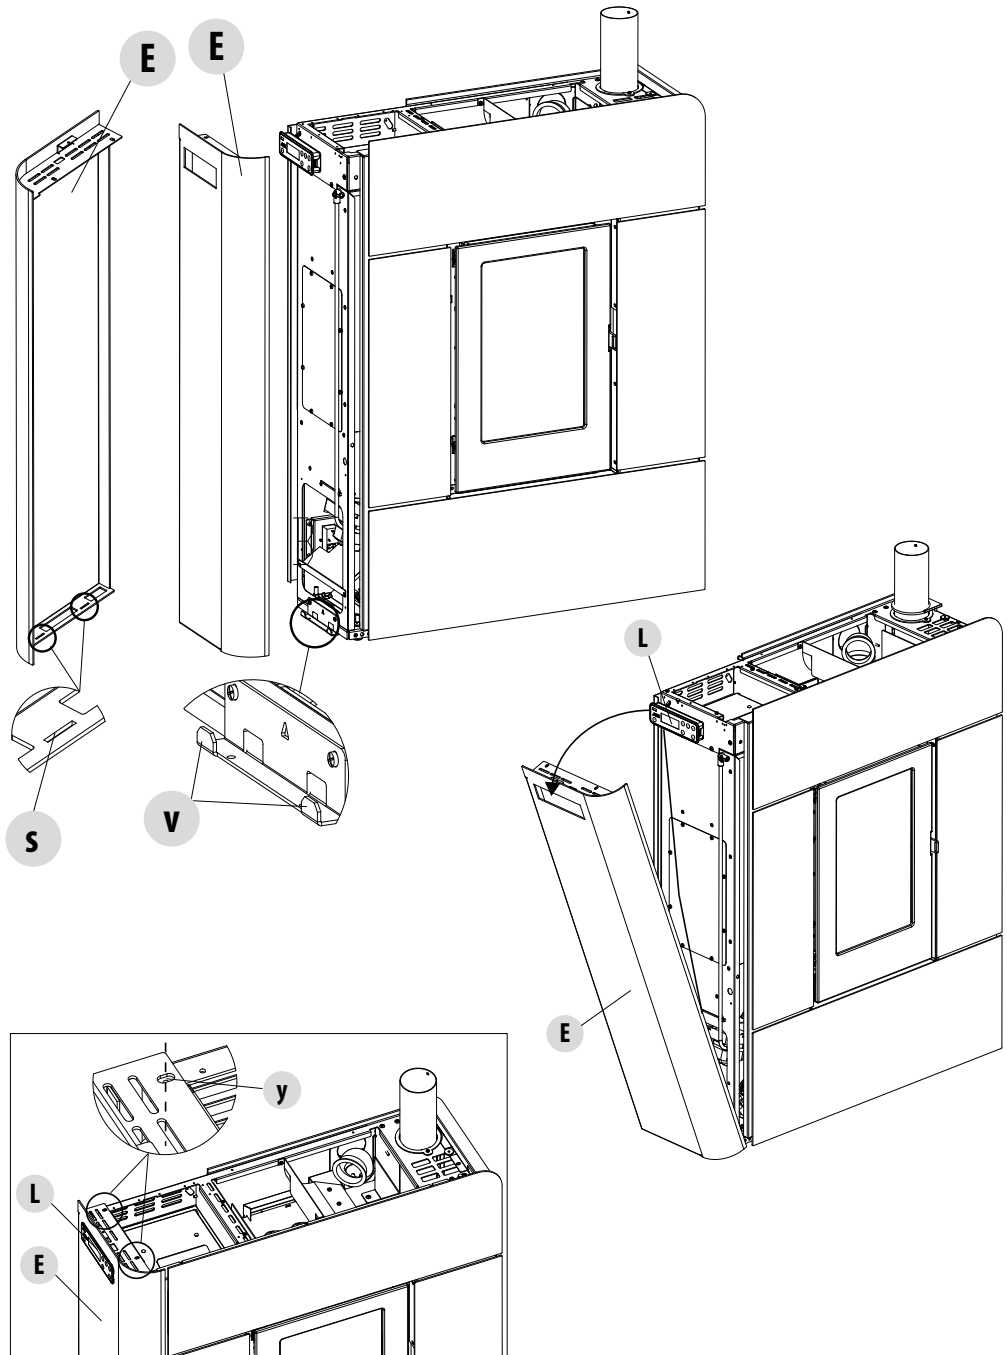

## 8-CLADDING INSTALLATION/REMOVAL

Take the bumper rubber washer “x” from the package and insert it into the top part of panel “E”.

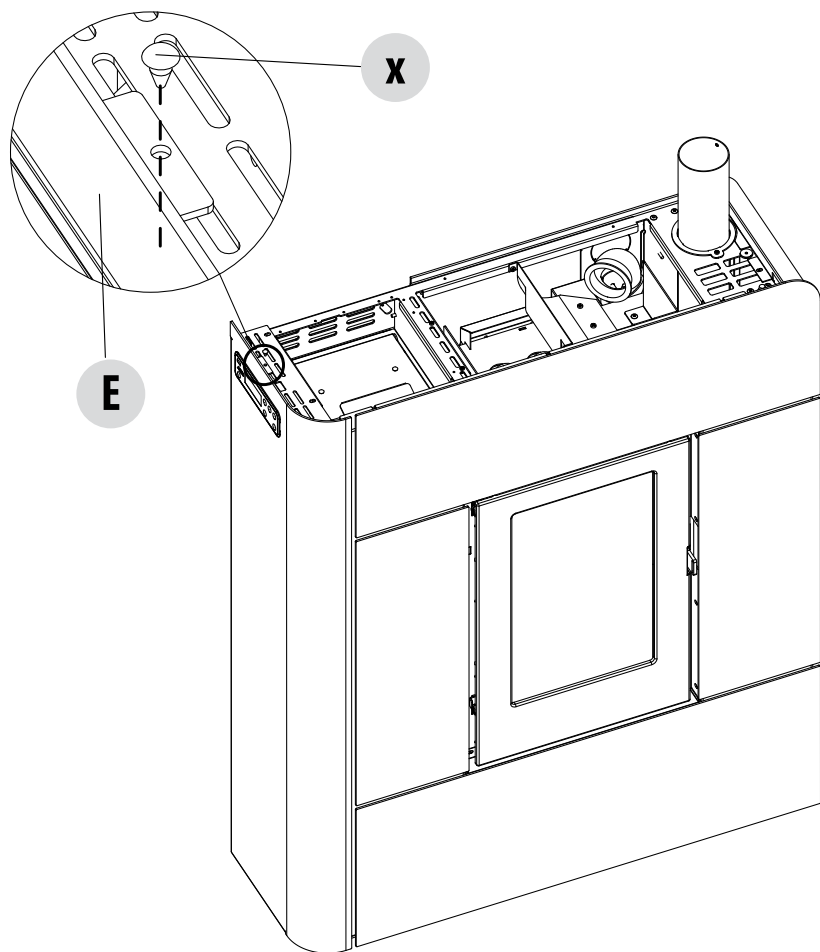


## 8-CLADDING INSTALLATION/REMOVAL

### ASSEMBLING THE TOP

Position the top "H" above the structure.

Lift the top "J" and secure the two screws "x" to block the top "H".

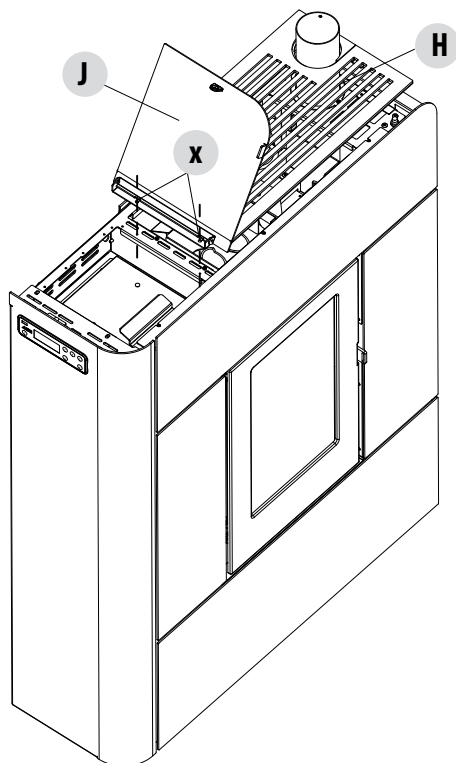


## 9-OPENING THE DOORS

To open the firebox door "Q" insert the cold handle "Z" into the slot and pull it towards you.



**Attention!** Only open the doors when the stove is switched off and cold.

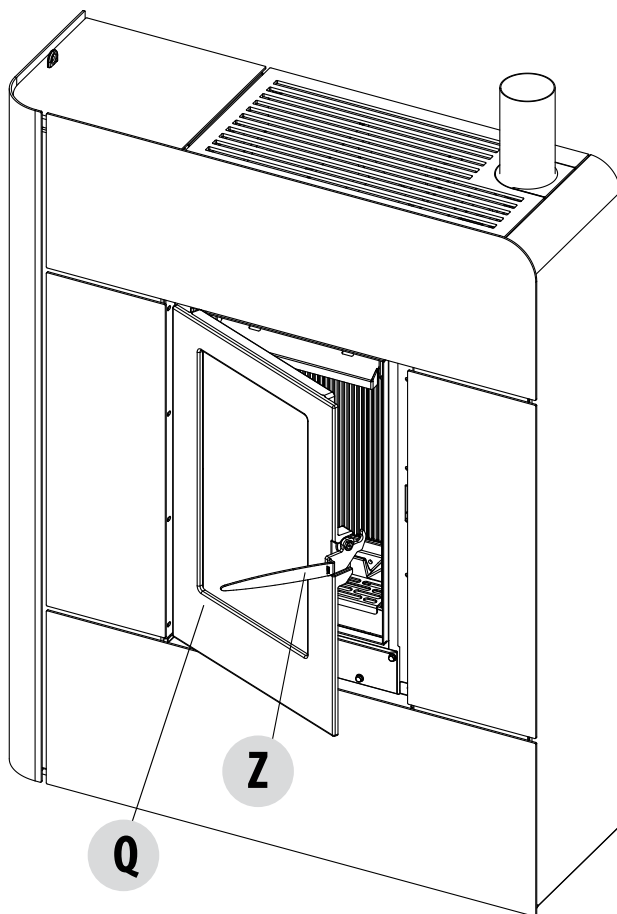

## 10-CONNECTIONS TO ADDITIONAL DEVICES

### WI-FI KIT INSTALLATION (OPTIONAL)

Install the Wi-Fi kit (code 4016003), according to the indications in the specific manual, on the back or near the stove using the velcro supplied with the accessory.

**Attention! The APP “WIFI Easy”** is available in the Play Store for Android Smartphones and Tablets and in iTunes for iOS.



## 10-CONNECTIONS TO ADDITIONAL DEVICES


### ELECTRICAL CONNECTION

First connect the power cable to the back of the stove and then to a wall socket.

The main switch must only be activated to switch the stove on; otherwise, it is advisable to keep it switched off.



*It is recommended to disconnect the power cable when the stove is not used.*

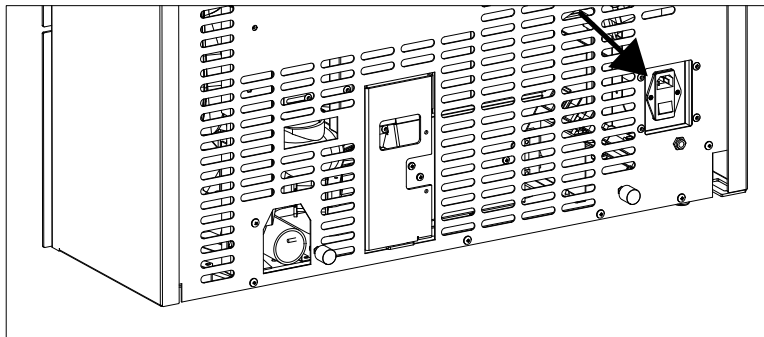

ELECTRICAL STOVE CONNECTION




*The cable must never come into contact with the smoke exhaust pipe or any other part of the stove.*

### STOVE POWER SUPPLY

After connecting the power cable to the back of the stove, turn the switch to (I) or ON.

The stove is then powered.

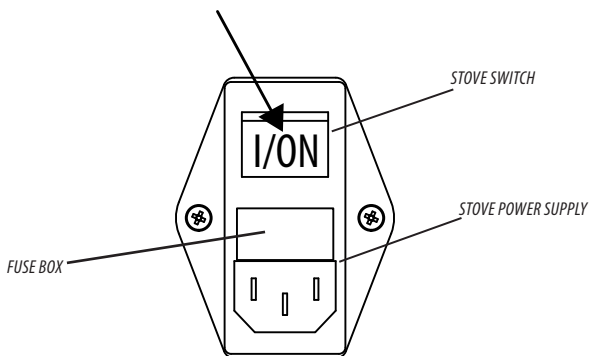

There is a fuse box also in the switch block next to the power socket. Open this compartment by simply lifting the cover, using a screwdriver as a lever from inside the power outlet compartment. Inside there are two fuses (3.15 A delayed), which may need to be replaced if the stove is not powered (e.g. the ON/OFF button does not turn on or the control panel display does not light up)- operation to be implemented by an authorised and skilled technician.

## 11-LOADING THE PELLETS

### LOADING THE PELLETS

Fuel is loaded from the upper part of the stove. Open door "J" and pellet door "K".  
Pour the pellets in slowly so that they are deposited at the bottom of the hopper.



*If loading pellets when the stove is running, open the door of the tank using the supplied glove.*



*When loading, do not let the pellet bag come into contact with hot surfaces.*

*Never remove the protection grid inside the hopper.*

*No other type of fuel other than pellets is to be inserted into the hopper, in compliance with above-mentioned specifications. Store the spare fuel at an adequate safe distance.*

*Do not pour pellets directly onto the brazier but only into the hopper.*

*When the appliance is running and when it is turned off, most of the stove surfaces are very hot (door, handle, glass, smoke outlet pipes, etc.). Therefore it is recommended to avoid coming into contact with these parts.*

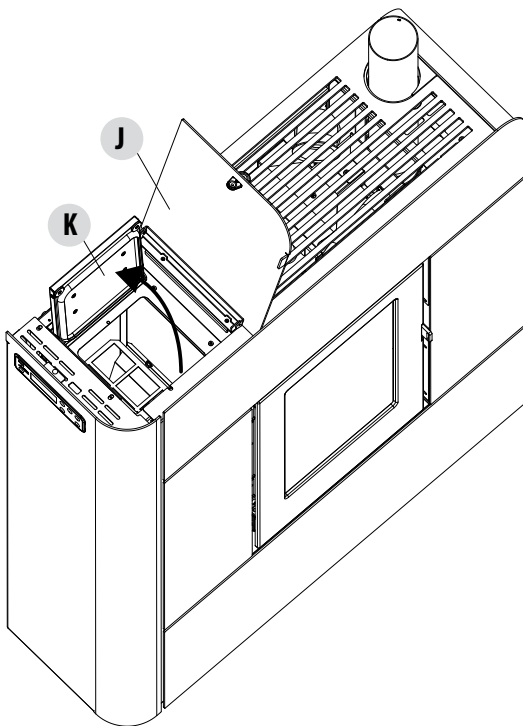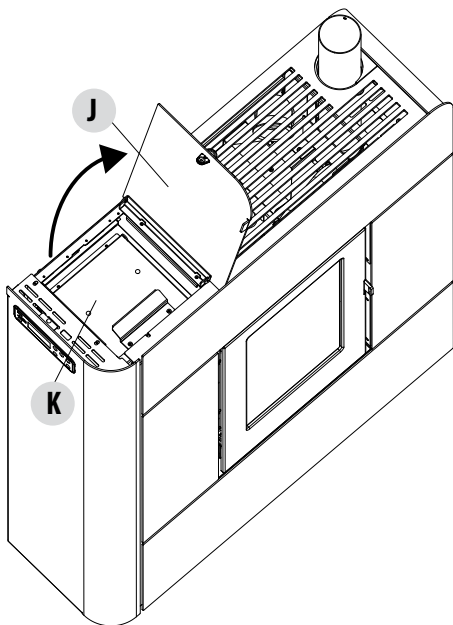



**MCZ GROUP S.p.A.**

Via La Croce n°8

33074 Vigonovo di Fontanafredda (PN) – ITALY

Telephone: 0434/599599 a.s.

Fax: 0434/599598

Internet: [www.mcz.it](http://www.mcz.it)

e-mail: [mcz@mcz.it](mailto:mcz@mcz.it)